UNGO ProSecurity

Ungo – Information

K20

KEYLESS ENTRY SYSTEM

Features

- (2) 4-Button Remote Transmitters (SAA474U)
- 2 Auxiliary Outputs
- On-Board Relays for Door Locks and Dome Light Supervision
- Horn Honk Output
- Driver's Door Unlock Priority Compatible
- Comfort Closure
- (+/-) Parking Light Output
- Common Features

RK1

REMOTE ENGINE START WITH KEYLESS ENTRY

Features

- (2) 4-Button Remote Transmitters (SAA474U)
- 2 Auxiliary Outputs
- Short Run / Turbo Timer Mode
- Compact Satellite Relay Pack
- Horn Honk Output
- (+/-) Door Lock Outputs
- Driver's Door Unlock Priority Compatible
- (+/-) Parking Light Output
- ProSecurity Programmer Compatible
- Common Features
- Common Remote Start Features

RK210

2-WAY REMOTE START WITH KEYLESS ENTRY SYSTEM

Features

- (1) 2-Way LCD Remote Transmitter (SAA477U)
- (1) 4-Button Remote Transmitter (SAA474U)
- 2 Auxiliary Outputs
- Short Run / Turbo Timer Mode
- Compact Satellite Relay Pack
- Horn Honk Output
- (+/-) Door Lock Outputs
- Driver's Door Unlock Priority Compatible
- (+/-) Parking Light Output
- ProSecurity Programmer Compatible
- Common Features
- Common Remote Start Features

RS10

REMOTE ENGINE START WITH KEYLESS ENTRY

Features

- (1) 4-Button Remote Transmitter (SAA474U)
- 1 Auxiliary Output
- (-) Door Lock Outputs
- Short Run / Turbo Timer Mode
- (+/-) Parking Light Output
- Comfort Closure

S100

SECURITY SYSTEM

Features

- (2) 4-Button Remote Transmitters (SAA474U)
- 2 Auxiliary Outputs
- (+/-) Parking Light Output
- ProSecurity Programmer Compatible
- Common Features
- Common Security Features

S670

TWO-WAY SECURITY SYSTEM

Features

- (1) 2-Way LCD Remote Transmitter (SAA477U)
- (1) 4-Button Remote Transmitter (SAA474U)
- 3 Auxiliary Outputs
- On-Board Relays for Door Locks, Dome Light Supervision, and Auxiliary 1
- Horn Honk Output
- (+/-) Parking Light Output
- Comfort Closure
- Common Features
- Common Security Features

SR1000

SECURITY SYSTEM WITH REMOTE ENGINE START

Features

- (2) 4-Button Remote Transmitters (SAA474U)
- 3 Auxiliary Outputs
- Short Run / Turbo Timer Mode
- Compact Satellite Relay Pack
- Horn Honk Output
- Driver's Door Unlock Priority Compatible
- (+/-) Parking Light Output
- ProSecurity Programmer Compatible
- Common Features
- Common Remote Start and Security Features

SR6000

TWO-WAY SECURITY SYSTEM WITH REMOTE ENGINE START

Features

- (1) 2-Way LCD Remote Transmitter (SAA477U)
- (1) 4-Button Remote Transmitter (SAA474U)
- 3 Auxiliary Outputs
- Short Run / Turbo Timer Mode
- Compact Satellite Relay Pack
- Driver's Door Unlock Priority Compatible
- (+/-) Parking Light Output
- ProSecurity Programmer Compatible
- Common Features
- Common Remote Start and Security Features

UNGO – Features and Technologies

Common UNGO Features

Anti-Code Grabbing Technology
Individual Remote Recognition
Keyless Entry*
Remote Enabled Valet
Hyper Blue Status LED
Remote Panic
Selectable Ignition Controlled Door Locks
ProSecurity Starter Disable*
ProSecurity Power Up
Progressive Door Unlock*
Dome Light Supervision Output*
Trunk/Hatch Release Output*

* May Require Additional Parts & Labor

Common Security Features

Extended Range Antenna
Dual Stage Impact Sensor
Programmable Override Sequence
Remote Silent Arm/Disarm Capability
Event History Diagnostics
Selectable Siren Duration and Tones
False Alarm Prevention Circuitry

Common Remote Start Features

Extended Range Antenna
Anti-Grind Circuitry
Tachometer or Voltage Sensing
Gasoline or Diesel Vehicle Compatible
Over and Under Rev Protection
Built-in Wait-to-Start Timer
Selectable Run Timer
Short Run Timer / Turbo Timer Mode
Rear Defroster Activation

UNGO Feature Descriptions

Anti-Carjacking
The optional anti-carjacking system feature is designed to ensure that any unauthorized user of the vehicle (even using the keys and remote control) will not be able to permanently separate the owner from their vehicle.

This system cannot prevent a carjacking attempt; however, it does ensure that if an unauthorized user takes the vehicle, it will be disabled (after several progressive warnings) as a safely as possible.

Anti-Code Grabbing Technology (a.k.a. Code Hopping):
The receiver and remotes use a mathematical formula called an algorithm to change their code each time the remote is used. This technology has been developed to increase the security of the unit. The control unit knows what the next codes should be. This helps to keep the remote “in sync” with the control unit even if you use the remote control out of range of the vehicle.

Anti-Grind Circuitry
Whenever the vehicle is remote started, advanced anti-grind circuitry prevents the starter from engaging, even if the key is turned to the start position. This prevents damage to the starter motor if the key is turned to the start position during remote start operation.

Built-in Wait-to-Start Timer
Diesel vehicles need adequate time to warm up the glow plugs prior to starting. When the remote start is activated, the wait-to-start timer will allow the glow plugs to properly warm up before engaging the starter circuit. This feature prevents damage to the motor and glow plugs during remote start operation.

Comfort Closure
If programmed ON the door lock output will activate the Comfort Closure output for 20 seconds. This output will begin 200mS after the final door lock output has completed regardless of the door lock programming. This feature is designed to integrate with vehicle that can close the power windows and sunroof by holding the key in the driver door lock position, and will operate on both single input systems and two pulse dead bolt systems.

Dome Light Supervision Output
The dome light will illuminate for 30 seconds each time the system is disarmed using the remote control. This is useful for seeing inside the vehicle at night prior to entering it.

Dual Stage Impact Sensor
A sensor mounted in the vehicle that is designed to pick up impacts to the vehicle or glass. Depending on the strength of the impact, the sensor can determine whether it's an accidental contact or actual violation attempt.

Event History Diagnostic
ProSecurity systems can provide notification that the alarm was previously triggered. The status LED will indicate which zone was involved. The system will retain this information in its memory, until the next time the ignition key is turned ON.

Extended Range Antenna
An optional external receiver/antenna used to upgrade the remote/receiver performance in areas of high radio interference such as military bases, airports, and hospitals.

False Alarm Prevention
It prevents annoying repetitive sequences due to faulty door pins switches or environmental conditions such as thunder, jackhammers, airport noise, etc.

Gasoline or Diesel Vehicle Compatible
ProSecurity remote start systems can be installed into either gasoline or diesel vehicles.

Hyper Blue LED
A blue LED (light Emmiting Diode) mounted at a discretionary location inside the vehicle. It is used to indicate the status of your system.

Individual Remote Recognition (IRR)
Individual Remote Recognition makes it possible to program different settings for each remote that is used with the system. Then, whenever a specific remote is used, the system will recall the setting assigned to that remote. IDR lets up to four users of the system have different settings that meet their specific needs. It is almost like having four separate alarms in your vehicle, one for each user.

Keyless Entry
Allows for easy entry or exiting of the vehicle without having fumbling around for keys. May require additional parts and labor.

Over and Under Rev Protection
The system monitors the engine speed and will automatically shut the engine off if the RPMs rise above or fall below the programmed levels. This feature prevents damage to the motor due to fuel delivery system failures or other problems, which may cause the engine to race.

Programmable Override Sequence
ProSecurity systems can be programmed to respond to one to five pulses of the Valet/Override Switch for the disarm function.

Progressive Door Unlock
For added security, the ProSecurity system can be configured to unlock the driver's door only, leaving the passenger doors locked. Pressing the UNLOCK button an additional time will unlock the passenger doors. This option requires additional parts and labor.

ProSecurity Power Up
The ProSecurity system will store its current state of non-volatile memory. If the power is lost and then reconnected the system will recall the stored state from memory. This means if the unit is in Valet Mode and the battery is disconnected for any reason, when the battery is reconnected the unit will still be in Valet Mode.

ProSecurity Starter Disable
An automatic switch controlled by your system that prevents the vehicle's starter from cranking whenever the system is armed. The vehicle is never prevented from cranking when the system is disarmed, in Valet Mode, or if the starter interrupt switch itself fails.

Rear Defroster Activation
During remote start operation, the rear defroster can be activated. This option requires additional parts and labor.

Remote Enabled Valet (REV)
The security system will not arm, even with the remote, but all convenience functions (door locks, trunk release, etc.) will still continue to work normally. REV allows access to Valet Mode without having to disclose the location of the Valet/ Override switch.

Remote Panic
If you are threatened in or near your vehicle, you can attract attention by triggering the system with your remote control. Just press the "PANIC" or "LOCK" button for two seconds, and you will enter Panic Mode. The siren will sound and the parking lights will flash for the programmed siren duration. To stop Panic Mode at any time, press the "LOCK" button on the remote.

Remote Silent Arm/Disarm Capability
The siren chirps upon arm or disarm can be temporarily eliminated for that one operation only. The siren arm/disarm chirps can be turned off permanently, if desired. The siren chirps will also be eliminated during the warn-away trigger of the Dual Stage Impact Sensor.

Selectable Ignition Controlled Door Locks
When the ignition is turned ON, the doors will lock within 3 seconds and unlock when the ignition is turned OFF. Ignition controlled lock and unlock are independent features are can be programmed separately.

Selectable Siren Duration and Tones
The duration of the siren can be programmed to either 30 or 60 seconds. Some states have laws regulating how long a security system can sound. The multi-tone sirens included with ProSecurity systems can be easily modified to select desired tones or single tone.

Short Run Timer / Turbo Timer Mode
Short run turbo mode keeps the engine running after arriving at your destination for a programmable period of time.

Tachometer or Voltage Sensing
ProSecurity remote start systems either use a tachometer signal or sense the voltage of the vehicle during remote start activation. These signals inform the remote start system that the vehicle has successfully started and is running.

Trunk/Hatch Release Output
The system's auxiliary output can be programmed to operate a factory power release for the vehicle's trunk or hatch. If the factory release is not power activated, an optional trunk release solenoid can often be added.

Obtaining Optimal Range

Mounting the Extended Range Antenna:

1. Clean the mounting area with a quality glass cleaner or alcohol to remove any dirt or residue.
2. Plug the receiver/antenna cable into the receiver/antenna.
3. Mount the receiver/antenna vertically using the supplied double-sided tape.
4. Route the receiver/antenna cable to the control module and plug it into the four-pin antenna connector.

Important:

• To achieve the best possible range, DO NOT leave the antenna cable bundled up tightly underneath the dash. Try to extend the cable the full length during installation.

• DO NOT mount the control module to close the vehicle's Body Control Module and/or Electronic Control Modules.

Mounting the Standard Antenna:

1. Route the antenna as high up as possible, extending it to its full length.
2. Secure it in place using a cable tie.

Important:

• DO NOT cut or extend the antenna, as it's tuned precisely to the control unit.

• Route the antenna away from moving parts under the dash and from the vehicle's Body Control Module and/or Electronic Control Modules.

Mounting the Control Unit:

• Do not mount or secure the control unit to close to the vehicle's Body Control Module and/or Electronic Control Modules.

• Do not mount or secure the control unit to close sources of heat, such as the heater core and/or air ducts.

• Ground the control unit to a clean, paint-free sheet metal location using a factory bolt that DOES NOT have any vehicle component grounds attached to it. A screw should only be used when in conjunction with a two-sided lock washer. Under dash brackets and door sheet metal are not acceptable ground points.

It is recommended that all security components be grounded at the same location.

Turning Off the Anti-Code Grabbing Technology (a.k.a. Code Hopping):

Although this is a feature designed to prevent the remote transmitters from being cloned and retransmitted to the control unit, it is virtual impossible to do. "Code Grabbers" have a very limited range, usually required to within 5 feet of the remote transmitter while the button is being depressed. By turning the off the Anti-Code Grabbing feature, it can increase the receiving/transmitting range by 30-35%.

Refer to the "System Features Menu" for the Feature Number and programming instructions.

Double Stacking (2) CR2016 Batteries:

The CR2032 3-volt micro lithium coin cell battery inside of the SAA474U (4-button) remote transmitter can be substituted with (2) CR2016 3-volt batteries. This can increase the range between 65-75%, depending on the surroundings.

Procedure:

1. Insert a small flat head screwdriver into the notch on the bottom of the remote transmitter.
2. Gently twist the screwdriver to spreading apart the two halves of the remote transmitter.
3. Open up the remote transmitter exposing the CR2032 battery and slide it out.
4. Slide (2) CR2016 batteries into the battery holder with the "+" facing upwards. (It may be easier to slide one battery in at a time. With the first battery in place, slide the second battery between the PC board and battery.)
5. Prior to closing the two halves of the remote transmitter, verify the batteries are installed correctly by pressing any of the buttons. The green LED indicator should illuminate when a button is pressed. If the LED does not illuminate, double-check the direction of the batteries. The "+" should be facing upwards matching the "+" on the battery retaining clip.
6. Snap together the two halves of the remote transmitter.

Obtaining a Tachometer Reference Signal

The tachometer reference signal is an essential signal for the safe operation of a remote start system. This signal informs the remote start module that the vehicle has successfully started and is running. It can also determine whether the vehicle is idling at a safe RPM level. In the event the vehicles idle is racing or below safer operating level, the remote start module will shut down.

To test for a tachometer wire, a multi-meter capable of test AC voltage must be used. The tachometer wire will show between 1V and 6V AC. In multi-coil systems, the system can learn individual coil wires. Individual coil wires in a multi-coil ignition system will register lower amounts of AC voltage. Also, if necessary, the system can use a fuel injector control wire for engine speed sensing. Common locations for a tachometer wire are at the ignition coil, back of the gauge cluster, engine computers, and automatic transmission computers.

How to Find a Tachometer Wire with a Multi-Meter:
1. Set the multi-meter to ACV or AC voltage (12V or 20V is fine)
2. Attach the (-) probe of the meter to chassis ground.
3. Start the vehicle and allow it to reach its normal idle speed.
4. Probe the wire you suspect of being the tachometer wire with the red probe of the meter.
5. If it's the correct wire the meter will read between 1V and 6V.

Multi-Coil Systems:
1. Examine the individual coils and determine which wires are common on each coil. (Example: 2002 Chevy Pick-up: Each coil has 4 wires, three common wires on each coil and the 4th wire changes.)
2. The "different" colored wire can be used for the tachometer reference signal for the remote start module. (Only one coil wire is necessary.)
3. Teach tachometer reference signal to the remote start module.

It is highly recommended to solder this connection, due to the heat generated inside the engine bay. Using t-taps or scotch-locks are likely to fail due to the heat.

Fuel Injector Wire:
1. Examine the individual fuel injectors and determine which wire(s) are common on each fuel injector.
2. The "different" colored wire can be used for the tachometer reference signal for the remote start module. (Only one fuel injector wire is necessary.)
3. Teach tachometer reference signal to the remote start module.

It is highly recommended to solder this connection, due to the heat generated inside the engine bay. Using t-taps or scotch-locks are likely to fail due to the heat.

Tachometer Reference Options

Tachless
If programmed to the voltage sense setting, the unit will crank the starter for a preset time during. Once the starter has been engaged, the system will check the voltage level to verify the engine is running.

When using tachless operation, it is essential to determine the correct crank time to prevent damage to the starter. It may take several remote start activations to determine the crank time.

Some vehicles have many accessories, which are turned on during remote start activation. In these vehicles, the variation of voltage between the engine off and the vehicle running is very slight and the remote start module may "think" the vehicle has not started. This can cause the remote start module to shut down after the vehicle has been started. If this is the case, the Voltage Check Level must be set to the LOW position.

Voltage sensing is not recommended in areas that experience extreme cold temperatures. The resistance in the vehicles wiring increases which can cause intermittent remote start reliability.

454T: Alternator RPM Monitor

The 454T Alternator RPM Monitor is for use with remote engine starts as an alternative to direct connection to the vehicle's tachometer or fuel injector wire. It detects electrical spikes in the vehicles electrical system and converts them into an output that simulates a tachometer.

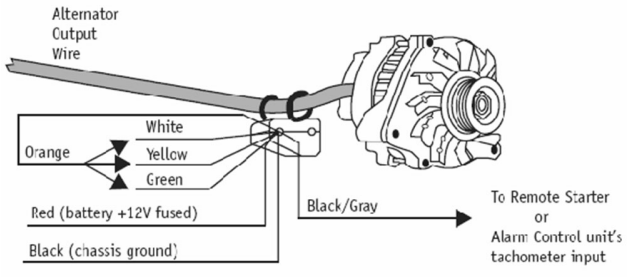

Remote Start Terms and Definitions

Immobilizer (a.k.a.: Transponder)

The Immobilizer uses an antenna ring around the ignition cylinder to energize a small transponder chip hidden in the ignition key. When the ignition is turned on, the chip is energized and the antenna rings sends the code to the Immobilizer control unit. The vehicle will only start if the code matches the one programmed into the vehicle.

Passkey/VATS

The Passkey/VATS system consists of four parts: the Passkey cylinder, the ignition switch, the instrument cluster panel (IPC), and the power train control module (PCM). The system requires that the key cylinder be mechanically turned using a key. When the key cylinder is properly turned, it generates a resistance code (R-Code), which is sent to the IPC. The vehicle will only start if the R-Codes match the key and key cylinder.

Passlock 2

The Passlock 2 system must see the correct resistance code at the correct time. When the ignition switch is turned to the crank position, the "Bulb Check" wire is switched to ground. This starts a time window during which the instrument cluster panel (IPC) analyzes the resistance code (R-Code). If the R-Code is valid and is received in the proper window of time, the IPC sends a code via data bus to the PCM to enable the fuel injection system. If the key cylinder itself is pulled out or damaged, it will not generate the resistance code and the vehicle will not run.

Passkey 3

The Immobilizer uses an antenna ring around the ignition cylinder to energize a small transponder chip hidden in the ignition key. When the ignition is turned on, the chip is energized and the antenna rings sends the code to the Immobilizer control unit. If the code is incorrect the vehicle will not start.

PATS

Passive Anti-Theft System (PATS) uses a specially programmed key to start the vehicle, similar to the Immobilizer. It uses an antenna ring around the ignition cylinder to energize a small transponder chip hidden in the ignition key. When the ignition is turned on, the chip is energized and the antenna ring sends the code to the PATS control unit. If the code is incorrect the vehicle will not start.

Resistor

One of the components necessary in interface with VATS factory anti-theft systems. A resistor(s) are used in conjunction to reproduce the resistance code (R-Code) embedded in the vehicle's key

UNGO – Application Notes

HOW IT WORKS: There is a small chip in the ignition key called a ***transponder***. When the key is inserted into the ignition switch it sends a code to the vehicles computer through a receiver coil mounted to the barrel. Once the computer has identified it as a valid key, it enables the starter and fuel management systems. At present, there is no way to get around this security without sacrificing 1 of the vehicles keys and installing it under the dash as shown in our diagram. If the vehicle only has 2 keys and 1 can not be spared, a new key must be purchased ***and coded*** to the vehicle by the dealer. That key can then be used in the bypass.

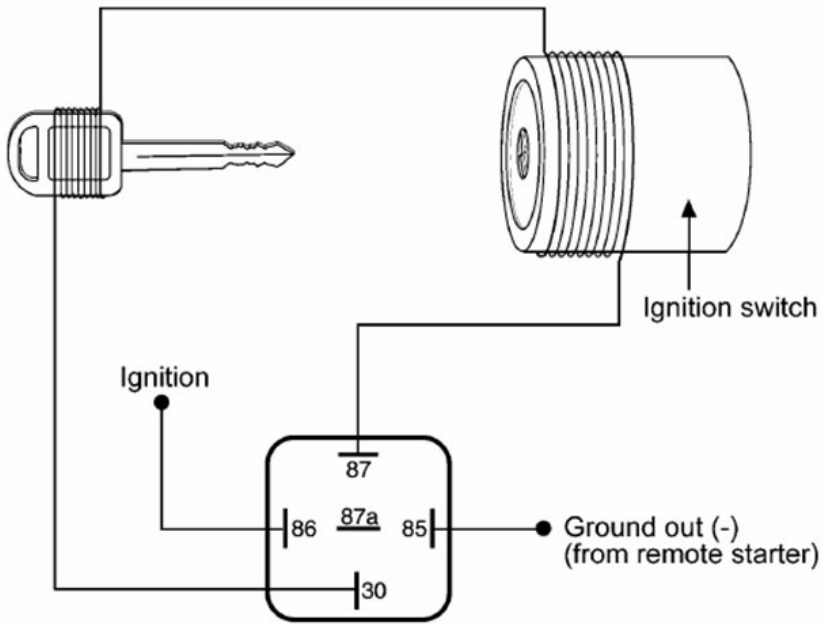

Use small 24-26 gauge wire. Wrap the wire around the up most front of the ignition switch approximately 9-10 times, then extend the wire out about 12-15 inches and wrap it around the key about 9-10 times. Take both ends of the wire and connect then to a relay as shown above. The **GROUND OUT** on pin #85 of the relay refers to the wire from your remote starter that goes to ground when the starter is activated. Once this circuit is tested and working, the keyway should either be cut in half or the key should be hidden well under the dash.

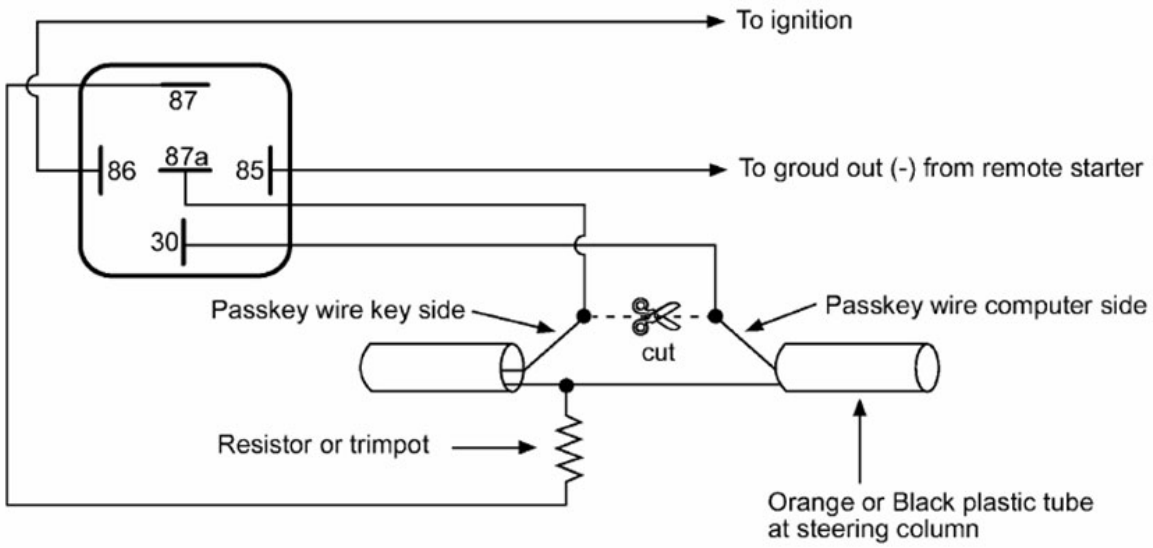

This system uses a resistor in the key, use a digital volt meter set to ohms and put 1 lead on each side of the vats chip in the center of the key, find a resistor to match your reading and proceed to wire a relay as per the diagram.
Locate the Orange or black tube running down the steering column from the ignition switch. Cut open the tube to expose the passkey wires inside. Your resistor or trumpet should be within +/- 10 ohms of the key. Either of the passkey wires can be cut. GM uses only a fixed number of different resistors with their **PASSKEY/VATS** system, your measurement should correspond to one of the following values.

390 Ohms	**1800 Ohms**	**7500 Ohms**
520 Ohms	**2370 Ohms**	**9530 Ohms**
680 Ohms	**3010 Ohms**	**11800 Ohms**
885 Ohms	**3740 Ohms**	
1130 Ohms	**4750 Ohms**	
1470 Ohms	**6040 Ohms**	

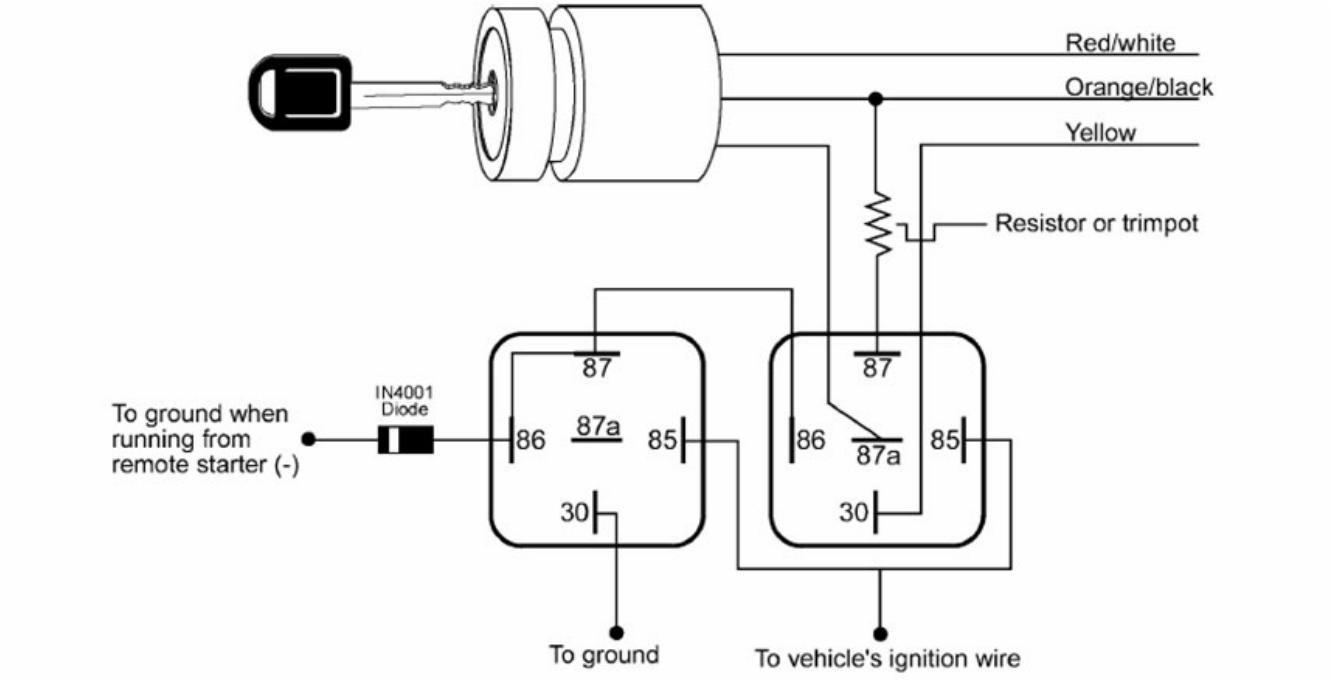

All GM trucks 1998 & up are equipped with PASSLOCK II security systems. In many ways it is like the PASSLOCK I system found on the 96-97 Cavalier and Sunfire, but with a few small changes. There is no bulb test wire on the ignition switch and the measurement for your resistor must be taken with the engine running.

1. Start the car with the key
2. Locate the 3 small wires (YELLOW, ORANGE/BLACK and RED/WHITE) coming from the ignition switch.
3. Separate the wires and cut the YELLOW wire in half.
4. Splice open the ORANGE/BLACK wire but do not cut it.
5. Use a digital ohm meter, attach 1 lead to the ORANGE/BLACK wire and the other lead to the Key side of the YELLOW wire.
6. Find a resistor of the same value +/- 10 ohms.
7. Wire 2 relays as shown

PLEASE NOTE: This is a fuel cut-off system. If the PASSLOCK II system is not properly bypassed the engine will immediately shut down after remote start. If this occurs verify that all the wiring is properly connected and that your resistor is within the allowable parameters.

Interfacing with Passkey 3 systems with Relays and Key

HOW IT WORKS: There is a small chip in the ignition key called a ***transponder***. When the key is inserted into the ignition switch it sends a code to the vehicles computer through a receiver coil mounted to the barrel. Once the computer has identified it as a valid key, it enables the starter and fuel management systems. At present, there is no way to get around this security without sacrificing 1 of the vehicles keys and installing it under the dash as shown in our diagram. If the vehicle only has 2 keys and 1 can not be spared, a new key must be purchased ***and coded*** to the vehicle by the dealer. That key can then be used in the bypass.

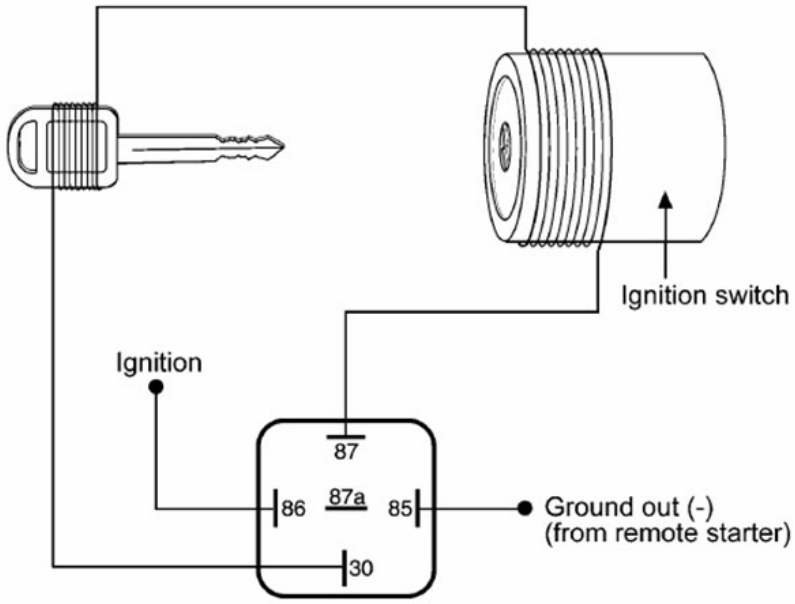

Use small 24-26 gauge wire. Wrap the wire around the up most front of the ignition switch approximately 9-10 times, then extend the wire out about 12-15 inches and wrap it around the key about 9-10 times. Take both ends of the wire and connect then to a relay as shown above. The **GROUND OUT** on pin #85 of the relay refers to the wire from your remote starter that goes to ground when the starter is activated. Once this circuit is tested and working, the keyway should either be cut in half or the key should be hidden well under the dash.

HOW IT WORKS: There is a small chip in the ignition key called a ***transponder***. When the key is inserted into the ignition switch it sends a code to the vehicles computer through a receiver coil mounted to the barrel. Once the computer has identified it as a valid key, it enables the starter and fuel management systems. At present, there is no way to get around this security without sacrificing 1 of the vehicles keys and installing it under the dash as shown in our diagram. If the vehicle only has 2 keys and 1 can not be spared, a new key must be purchased ***and coded*** to the vehicle by the dealer. That key can then be used in the bypass.

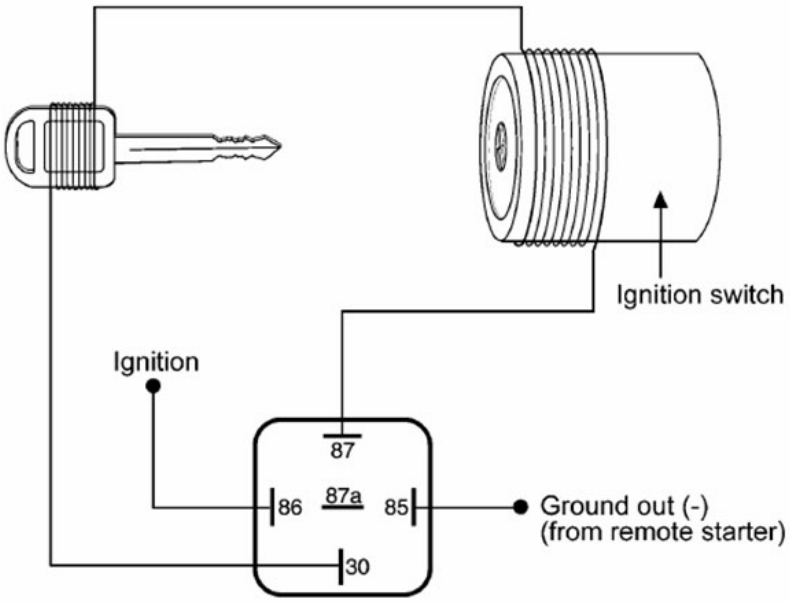

Use small 24-26 gauge wire. Wrap the wire around the up most front of the ignition switch approximately 9-10 times, then extend the wire out about 12-15 inches and wrap it around the key about 9-10 times. Take both ends of the wire and connect then to a relay as shown above. The **GROUND OUT** on pin #85 of the relay refers to the wire from your remote starter that goes to ground when the starter is activated. Once this circuit is tested and working, the keyway should either be cut in half or the key should be hidden well under the dash.

BYPASS MODULES
556U UNIVERSAL TRANSPONDER BYPASS MODULE

CHRYSLER
457CW DODGE, CHRYSLER JEEP DATA INTERFACE
555C CHRYSLER DODGE JEEP TRANSPONDER BYPASS
556C 2004-UP CHRYSLER DODGE JEEP TRANSPONDER BYPASS

HONDA / ACURA
556H HONDA AND ACURA TRANSPONDER BYPASS MODULE

FORD
555P FORD PASSIVE ANTI-THEFT SYSTEM BYPASS MODULE
555S FORD SECURELOCK ANTI-THEFT SYSTEM BYPASS MODULE
556S FORD SECURELOCK ANIT-THEFT BYPASS MODULE

GENERAL MOTORS
CAN2 2005-UP GENERAL MOTORS CAN BUS DATA INTERFACE
457GW GM DATA BUS INTERFACE
555G GM PASSKEY III REMOTE START INTERFACE MODULE
555L DPASSLOCK BYPASS WITH LEARN ROUTINE

TOYOTA / LEXUS
555X TOYOTA AND LEXUS TRANSPONDER BYPASS MODULE

VOLKSWAGEN
CAN1 VOLKSWAGEN CAN BUS INTERFACE

REMOTE CONTROLS
SAA474U 4-BUTTON TRANSMITTER
SAA477U TWO-WAY TRANSMITTER WITH ICONS

SENSORS
507M ELECTRONIC TILT AND MOTION SENSOR
508D INVISIBEAM FIELD DISTURBANCE SENSOR
504D DOUBLE GUARD SHOCK SENSOR
506T GLASS BREAKAGE SENSOR

GENERAL ACCESSORIES
451M DOOR LOCK RELAY ASSEMBLY
515R BACK-UP BATTERY SIREN
528T ADJUSTABLE TIMER RELAY
529T 2-WINDOW ROLL-UP KIT
530T 2-WINDOW AUTOMATION KIT
8632 SUPER BRIGHT RED LED WITH PLUG
SAA998T PROSECURITY PROGRAMMER
SAA988U SOFTWARE UPGRADE FOR PROSECURITY PROGRAMMER

UNGO – Remote Start Diagnostics

Remote Start Diagnostics

In the event that a remote start system fails to start, or stops running after a short period of time, you can retrieve the source of the shutdown from the UNGO ProSecurity system

1. Turn the Ignition off
2. Press and hold the Override switch
3. Turn the ignition on then off
4. Release the Override switch
5. Press and release the Override switch.

The LED will now report the last system shutdown by flashing one of the following patterns for a period of one minute.

LED Flashes	Shutdown Cause
One	System Timed Out
Two	Over-Rev Shutdown
Three	Low or no RPM
Four	Remote Shutdown or optional button
Six	+/- Shutdown
Seven	(-) Neutral Safety Shutdown
Eight	Wait-to-Start Timed Out

Remote Start Troubleshooting

The ignition comes on, but the starter will not crank

1. Does it start with the key in the ignition? If so, does the vehicle have a VATS Pass-Key system?
2. Will it start with the brake pedal depressed? (Make sure to disconnect the brake shutdown when performing this test.) If so, it may have a brake/starter interlock.
3. Is the correct starter wire being energized? Check by energizing it yourself with a fused test lead.

The starter cranks for six seconds but does not start.

1. Either the wrong ignition wire is being energized, the unit's ignition and accessory wires have been connected backwards, or the vehicle has two ignition circuits. Try activating the unit with the ignition key in the "run" position. If the vehicle then runs normally, retest your ignition system.

The starter continues to crank even though the engine has started.

1. Has the tach wire been learned? See Tach Learning section of the installation guide.
2. Is the tach wire receiving the correct information? Either the wrong tach wire has been used, or a bad connection exists.

The climate control system does not work while the unit is operating the vehicle.

Either the wrong accessory wire is being energized or more than one ignition or accessory wire must be energized in order to operate the climate control system.

The remote start will not activate.

1. Check harnesses and connections. Make sure the harnesses are fully plugged into the remote start module. Make sure there are good connections to the vehicle wiring.
2. Check voltage and fuses. Use a meter and check for voltage between the red wire in the 5 pin ribbon harness and the black ground wire. If you have less than battery voltage, check both 30A fuses on the relay satellite. Also make sure that the ground wire is going to a chassis ground and not to something under the dash.
3. Check diagnostics. The diagnostics will tell you which shutdown is active or not connected.

The remote start will activate but the starter never engages.

1. Check for voltage on the purple starter wire two seconds after the remote start becomes active. If there is voltage present, skip to Step 4. If there is not voltage present, advance to Step 2.
2. Check the 30A fuses.
3. Check diagnostics. If the gray/black wire is detecting ground upon activation, the starter will not crank.
4. Make sure the purple starter wire is connected to the correct starter wire.
5. Does the vehicle have an immobilizer? Some immobilizer systems will not allow the vehicle to crank if active.
6. Check connections. The two red heavy gauge input wires on the relay satellite should have solid connections. "T-taps", or "scotch locks" are not rec-

ommended for any high current heavy gauge wiring. Also, if the vehicle has more than one 12-volt input wire, then connect one red wire to each.

The vehicle starts, but immediately dies

1. Does the vehicle have an immobilizer? The vehicles immobilizer will cut the fuel and/or spark during unauthorized starting attempts.
2. Is the remote start programmed for voltage sense? If so, the start time may not be set high enough, or you may have to adjust the voltage threshold in programming. Voltage sense will not work on some vehicles.
3. Check diagnostics. Sometimes a shutdown will become active during cranking or just after cranking.

The vehicle starts, but the starter keeps running

1. Is the system programmed for engine checking off or voltage sense? When programmed for either of these features, the engine cranks for the preprogrammed crank time regardless of how long it takes to start the vehicle to actually start. Adjust to a lower cranking time.

2. Was the Tach Learn successful? The LED must light solidly and brightly to indicate a successful learn.

3. Make sure that there is a tach signal right at the purple/white tach input wire of the remote start. If not, recheck the connection to the vehicle's tach wire and make sure the wire is not broken or shorted to ground leading to the remote start.

The vehicle will start and run only for about 10 seconds

1. Is the remote start programmed for voltage sense? Try programming the unit for low voltage reference. If this does not work, a tach wire should be used.
2. Check diagnostics.

UNGO – Multiple Vehicle Operation

Technical Information: Multiple Vehicle Operation

Ungo ProSecurity remote transmitters are capable of operating multiple vehicles equipped with ProSecurity systems. This is beneficial for individuals with multiple vehicles and/or reducing the clutter on a keychain.

1. Follow the remote programming procedure for the particular ProSecurity system and delete all the remote transmitters for both vehicles.
2. Follow the remote programming procedure for the particular ProSecurity system and program the desired function to the assigned button. Continue this process until all the button assignments have been complete on both vehicles.

EXAMPLE: S100 Multiple Vehicle Operation

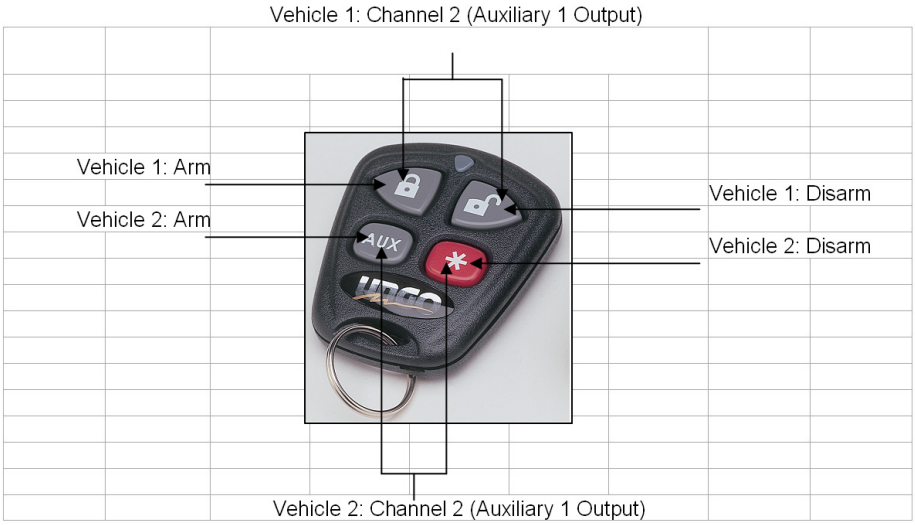

Programming Vehicle 1.

1. Open the door of the Vehicle 1.
2. Turn the ignition ON
3. Press the Valet/Override button 9 times and then press it one more time and hold it in. The LED will flash 9 times indicating that selection.
4. Release the Valet/Override button and turn the ignition OFF and then back ON.
5. Press the Valet/Override button 4 times and then press it one more time and hold it in.
6. Press the LOCK button on each remote transmitter. The LED will flash 4 times indicating that selection.
7. Release the Valet/Override button and press it 1 time and then hold it in. The LED will flash 5 times indicating that selection.
8. Press the UNLOCK button on each remote transmitter. The LED will flash 5 times indicating that selection.
9. Release the Valet/Override button and turn the ignition OFF and then back ON.
10. Turn the ignition ON.
11. Press the Valet/Override button 2 times and then press it one more time and hold it in.
12. Press both the LOCK and UNLOCK buttons together on each remote transmitter. The LED will flash 2 times indicating that selection.
13. Release the Valet/Override button and turn the ignition OFF.

UNGO – Multiple Vehicle Operation

Vehicle 1:
LOCK: Arm (Lock)
UNLOCK: Disarm (Unlock)
LOCK & UNLOCK: Channel 2 (Auxiliary 1)

Programming Vehicle 2

1. Open the door of the Vehicle 2.
2. Turn the ignition ON
3. Press the Valet/Override button 9 times and then press it one more time and hold it in. The LED will flash 9 times indicating that selection.
4. Release the Valet/Override button and turn the ignition OFF and then back ON.
5. Press the Valet/Override button 4 times and then press it one more time and hold it in.
6. Press the AUX button on each remote transmitter. The LED will flash 4 times indicating that selection.
7. Release the Valet/Override button and press it 1 time and then hold it in. The LED will flash 5 times indicating that selection.
8. Press the "*" button on each remote transmitter. The LED will flash 5 times indicating that selection.
9. Release the Valet/Override button and turn the ignition OFF and then back ON.
10. Turn the ignition ON.
11. Press the Valet/Override button 2 times and then press it one more time and hold it in.
12. Press both the AUX and "*" buttons together on each remote transmitter. The LED will flash 2 times indicating that selection.
13. Release the Valet/Override button and turn the ignition OFF.

Vehicle 2:
AUX: Arm (Lock)
"*": Disarm (Unlock)
AUX and "*": Channel 2 (Auxiliary 1)

UNGO – Door Lock Application Guide

Reverse Polarity Door Lock Systems

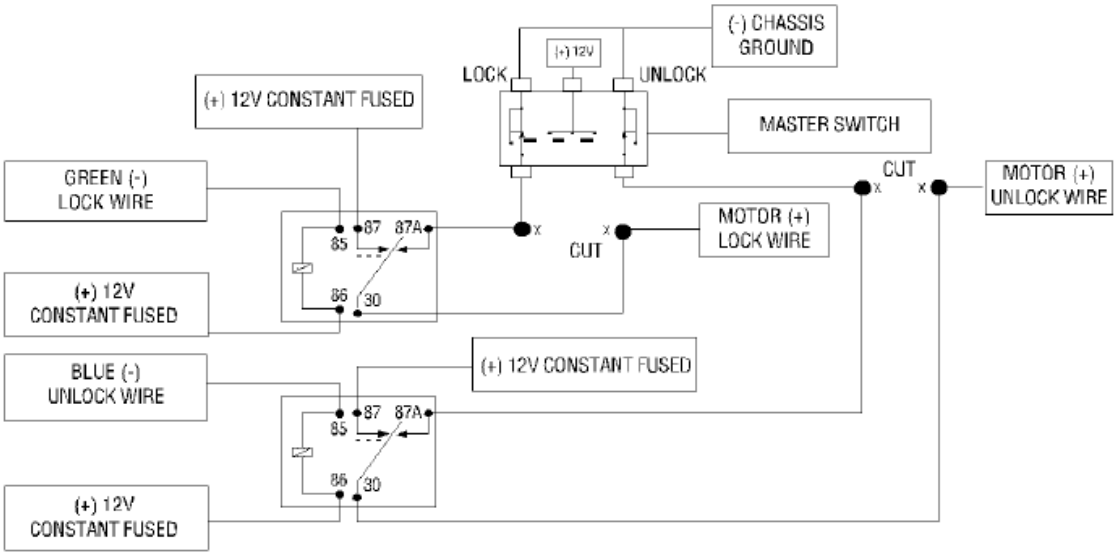

Aftermarket Door Lock Actuators

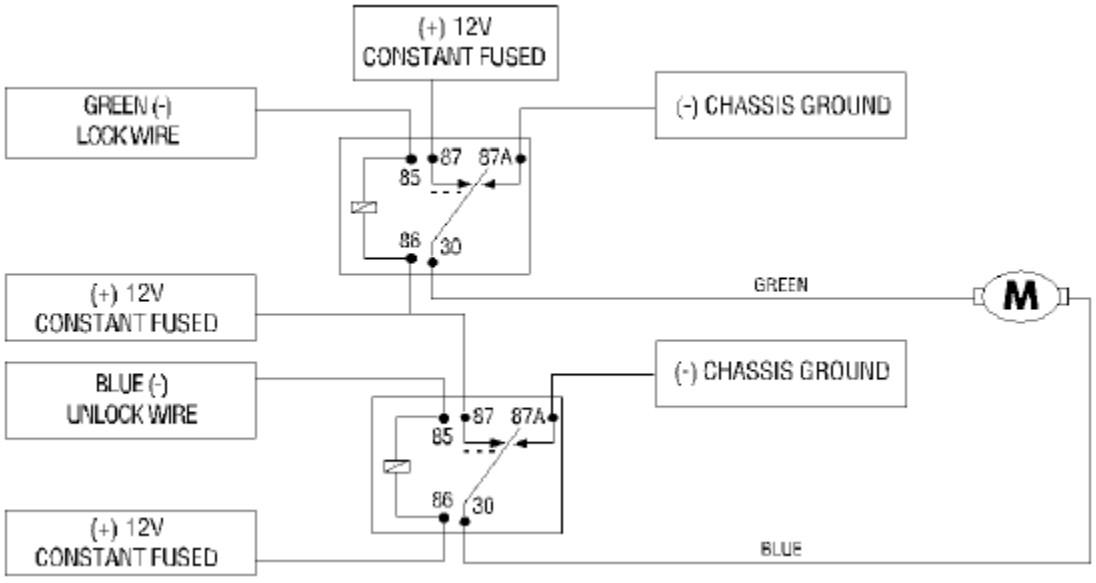

Vacuum Door Lock Systems

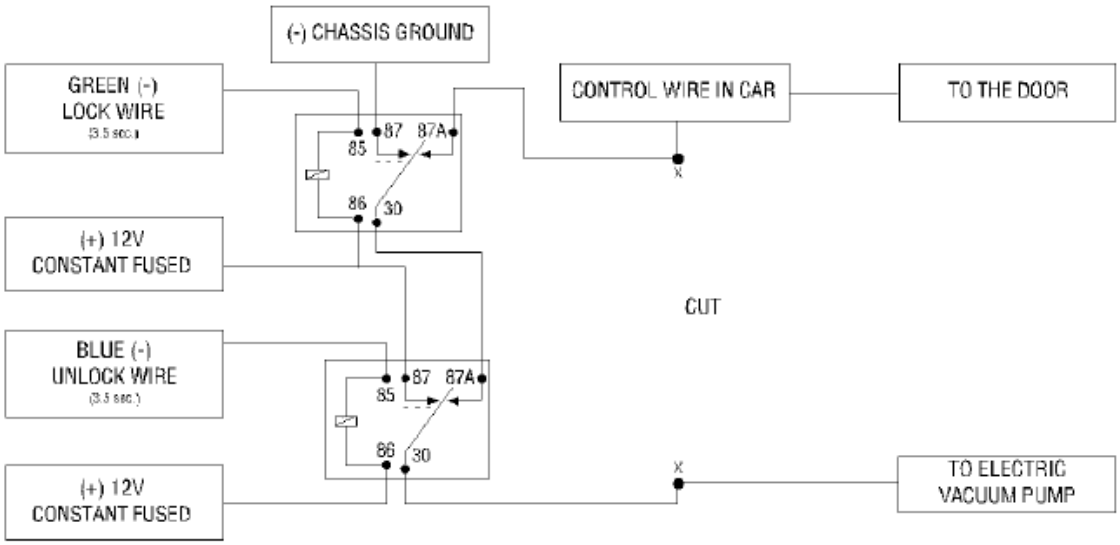

The lock pulse duration my be programmed to 3.5 seconds

One-Wire Door Lock System

This door lock system requires a negative pulse to unlock the foors , and cutting the wire to lock the doors.

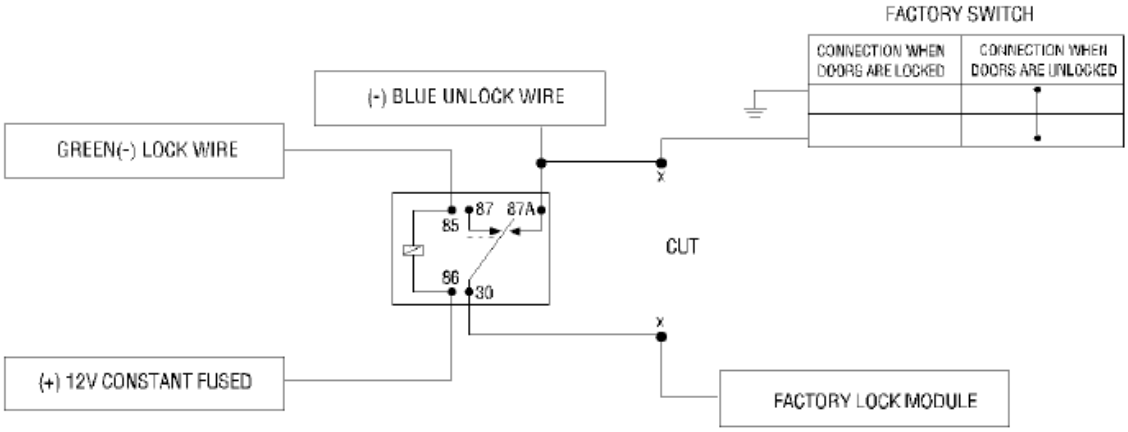

UNGO – Door Lock Application Guide

Multiplexed Door Lock Systems

Multiplexed door lock systems have more than one function on the same wire and require the use of different resistor values. It is necessary to use external relays any time a resistor is used.

Positive Trigger Multiplexed Door Lock System

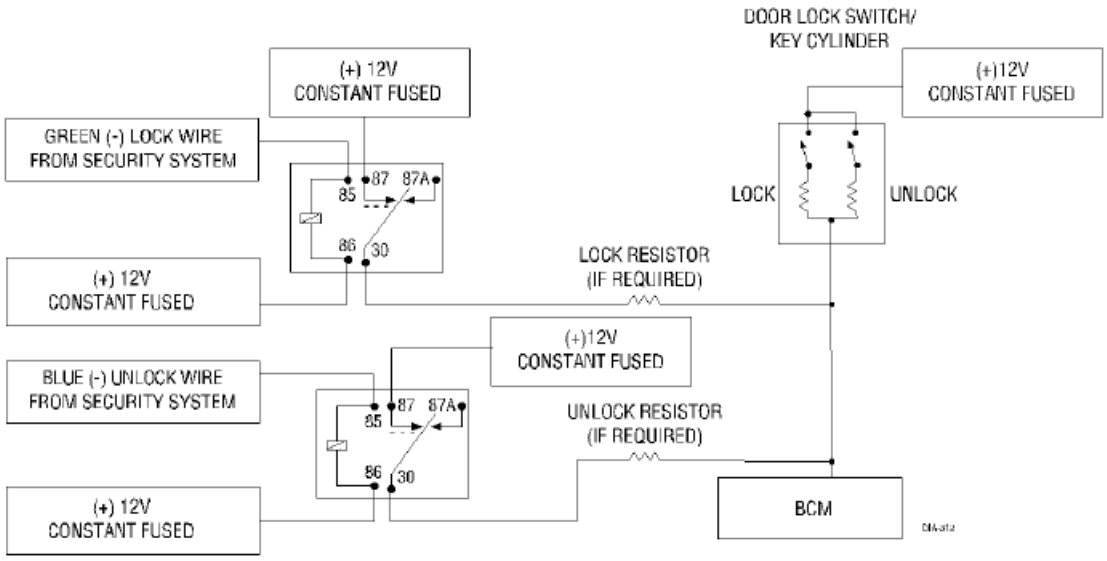

Test Procedure for Multiplexed Door Lock Systems:

1. Locate the Lock/Unlock wire in the vehicle.
2. Cut the wire in half and determine the polarity of the wire.
3. Using a digital multimeter, measure the resistance for Lock and Unlock. (See Diagram)

Test Configuration for Positive Door Lock Systems

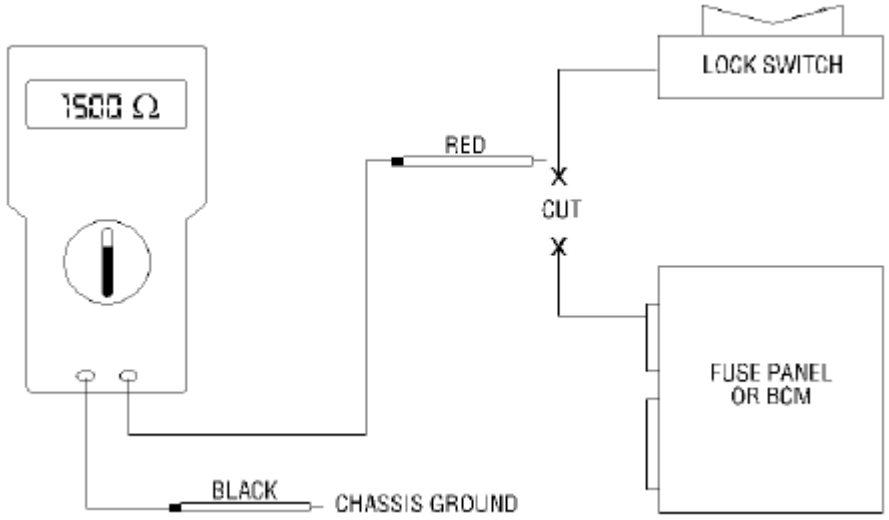

Multiplexed Door Lock Systems

Multiplexed door lock systems have more than one function on the same wire and require the use of different resistor values. It is necessary to use external relays any time a resistor is used.

Negative **Trigger Multiplexed Door Lock System**

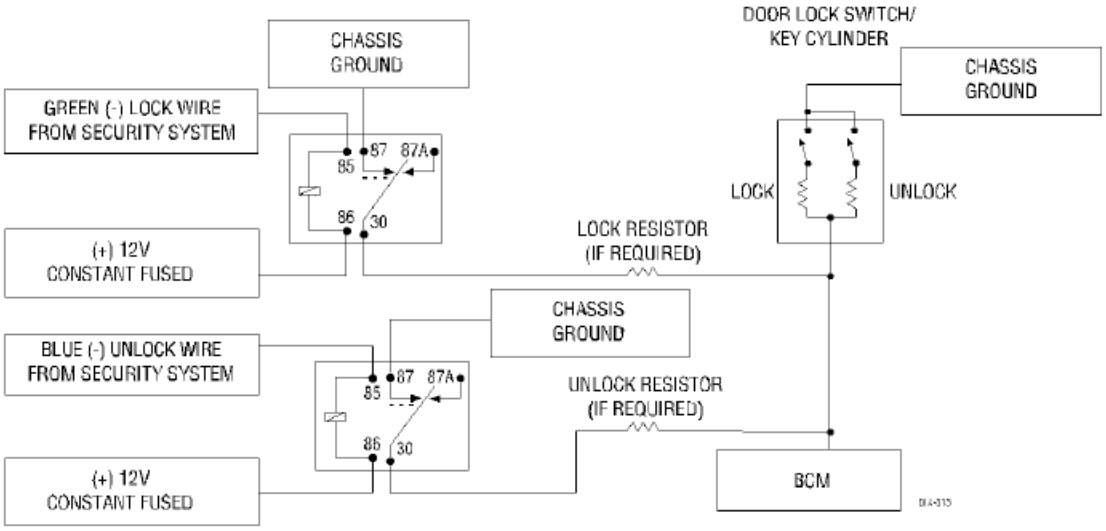

Test Procedure for Multiplexed Door Lock Systems:

1. Locate the Lock/Unlock wire in the vehicle.
2. Cut the wire in half and determine the polarity of the wire.
3. Using a digital multimeter, measure the resistance for Lock and Unlock. (See Diagram)

Test Configuration for Positive Door Lock Systems

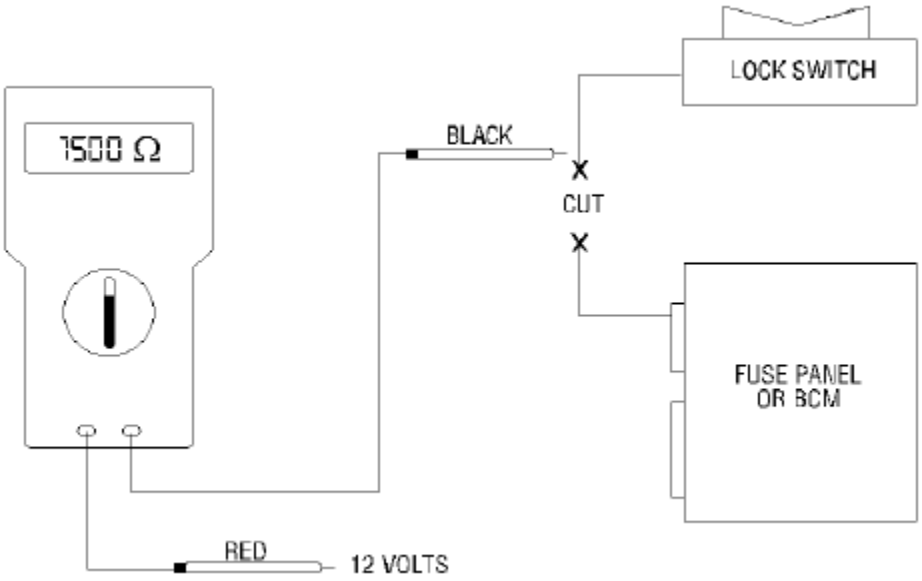

UNGO – Door Lock Application Guide

Multiplexed Door Lock Systems with On-Board Relays

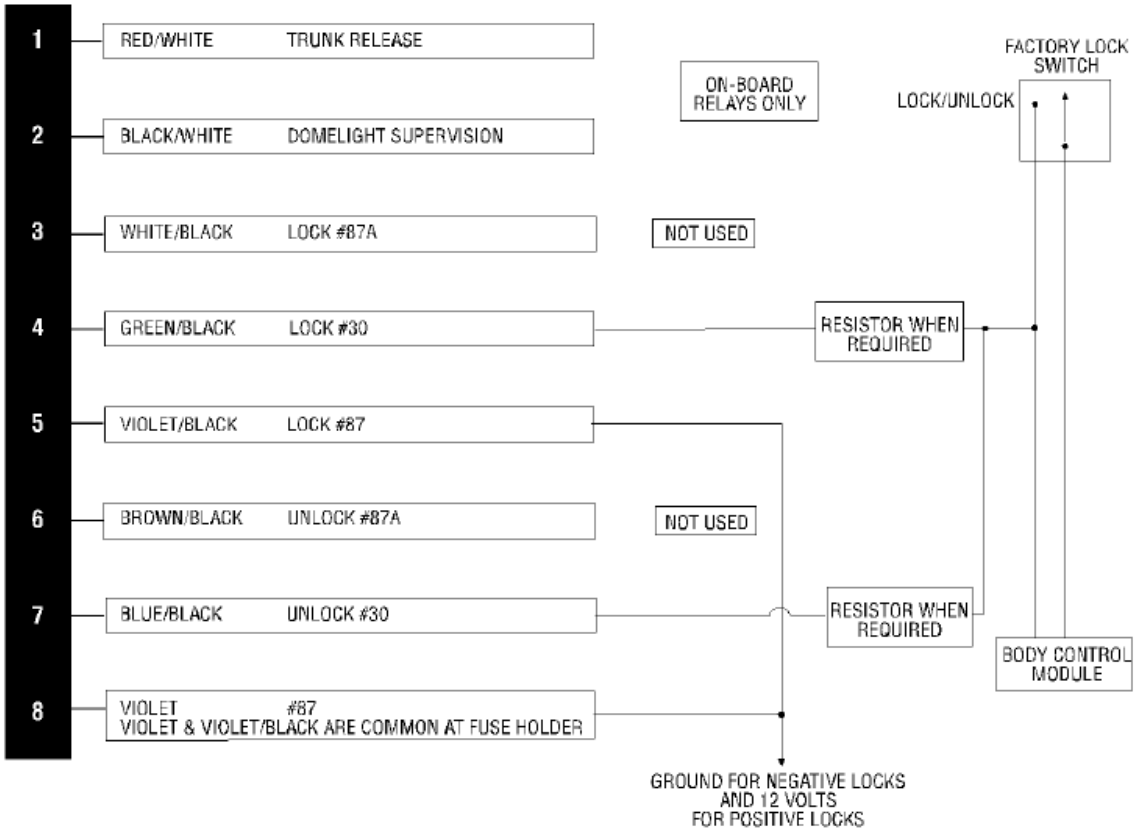

Reverse Polarity Door Lock Systems with On-Board Relays:

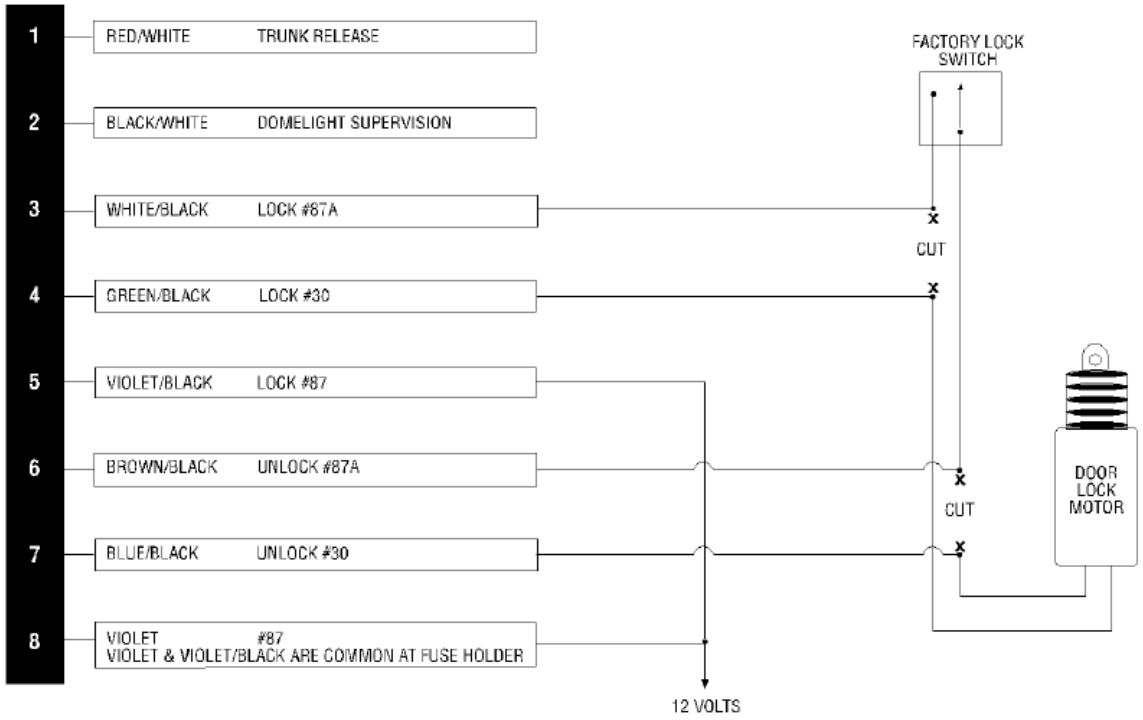

Progressive Door Lock Using Positive Door Lock Trigger

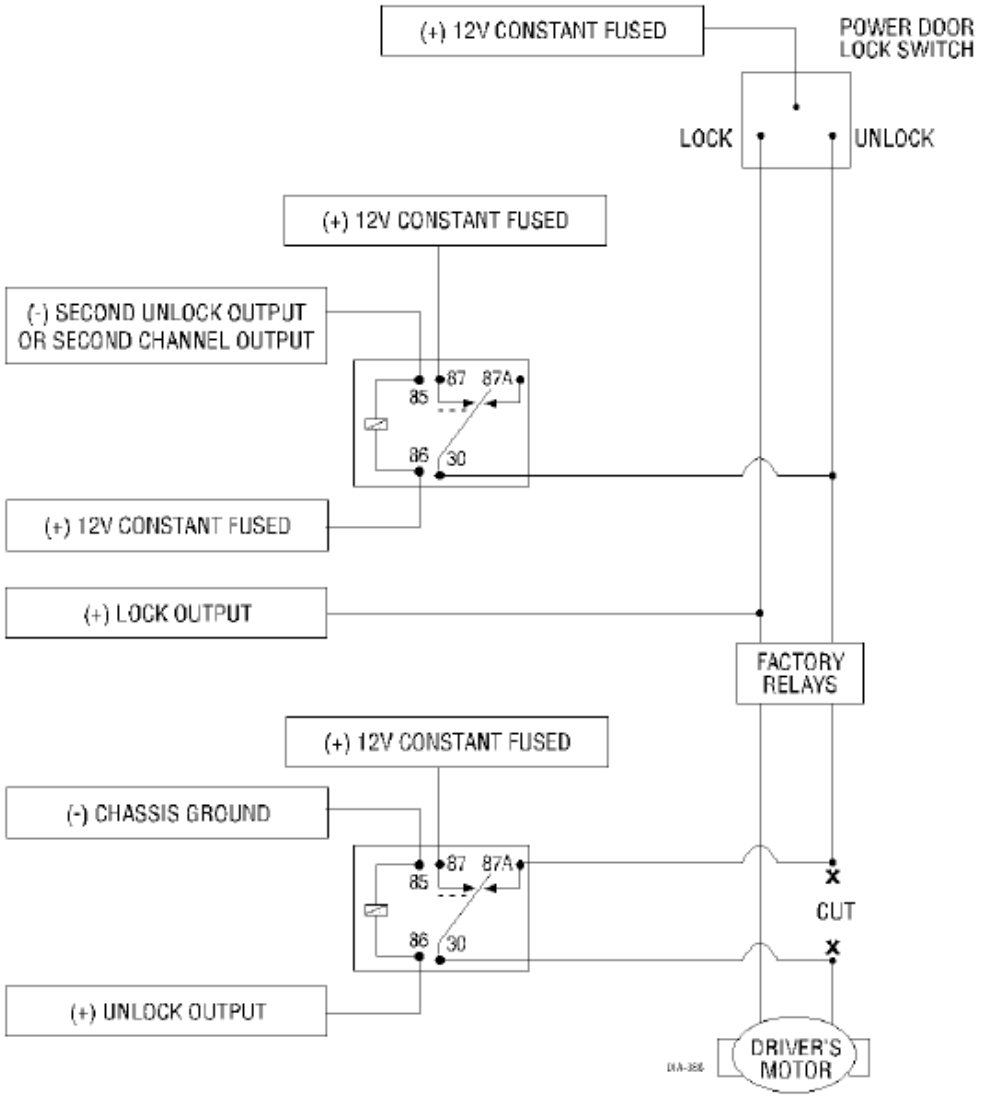

NOTE: *The second unlock output is a* ***(-)*** *output from the security/keyless entry system.*

Progressive Door Lock Using Negative Door Lock Trigger

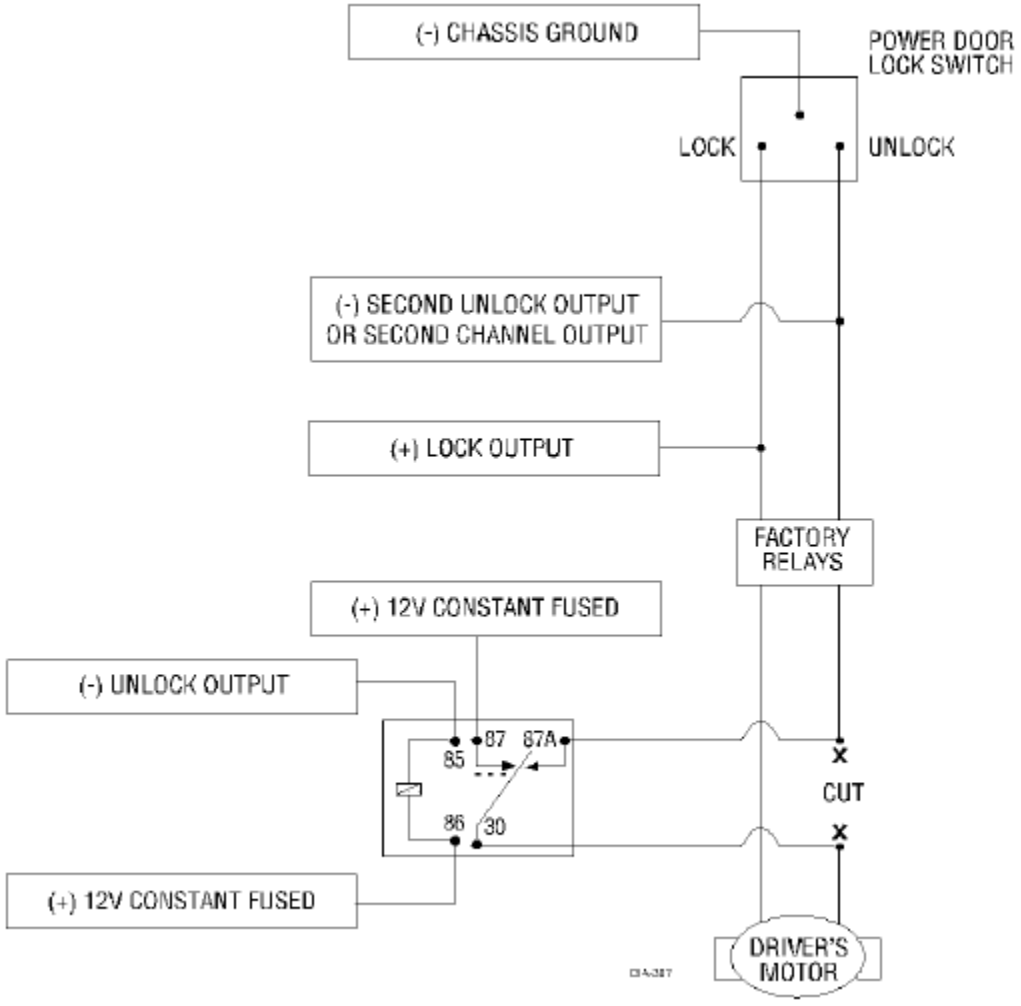

NOTE: *The second unlock output is a* ***(-)*** *output from the security/keyless entry system.*

Technical Information Module Programming: Models: K10, K20, S670, RS10
System features can also be changed by using the ProSecurity Programmer

To enter the learn routine:

1. **Key.** Turn the ignition on and then back off.

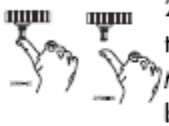

2. **Choose.** Within 10 seconds, press and release the Override switch the number of times corresponding to the feature number you want to program. (See Feature Menus.) Once the Override switch has been pressed and released the desired number of times, press it once more and hold it. After a second, the LED will flash and the horn will honk to indicate which feature you have accessed.

3. **Transmit.** The transmitter is used to select the desired setting. As shipped, the unit is configured to the LED ON settings. These are the default settings. Pressing the lock button will set it to the LED ON setting. The LED will light solid (stop flashing) to indicate the setting. The horn will honk once (if connected). Pressing the unlock button will change the setting to the LED OFF setting. The LED will go out indicating the change and the horn will honk twice (if connected).

4. **Release.** The Override switch can now be released.

For example, to program the arming mode from active to passive, within 10 seconds of turning the ignition off, and press and release the Override switch once. Then press it again and hold it. The LED will flash in groups of one and the horn will honk once (if connected). While holding the Override switch, press the unlock button. The LED will stop flashing and go out. The horn will honk twice if connected. Passive arming is now programmed. If that was not the desired setting, without releasing the Override switch, press the lock button. The LED will light solid and the horn will honk once if connected. Active arming is now programmed. Release the Override switch after the selection has been made.

You can advance from feature to feature by pressing and releasing the Override switch the number of times necessary to get from the feature you just programmed to the feature you wish to access. For example, if you just programmed Feature 2 and you next want to program Feature 3 to off, release the Override switch. Press and release it once to advance from Feature 2 to Feature 3. Then press it once more and hold it. The LED will flash in groups of three and the horn will honk three times (if connected) to confirm that you have accessed Feature 3.

K10 (Keyless Entry)

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
1	**Active Arming**	Passive Arming
2	**Chirps ON**	Chirps OFF
3	**Ignition Control Door Lock ON**	Ignition Control Door Lock OFF
4	**Ignition Control Door Unlock ON**	Ignition Control Door Unlock OFF
5	**Active Locking**	Passive Locking
6	**Ignition Control Dome Light ON**	Ignition Control Dome Light OFF
7	**0.8 Second Door Lock Pulse**	3.5 Second Door Lock Pulse
8	**Double Pulse Unlock OFF**	Double Pulse Unlock ON
9	**Security Features ON**	Security Features OFF
10	**Code Hopping ON**	Code Hopping OFF

Note: Factory default settings are shown **BOLD.**

K20 (Keyless Entry with On-Board Relays)

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
1	**Ignition Control Door Lock ON**	Ignition Control Door Lock OFF
2	**Ignition Control Door Unlock ON**	Ignition Control Door Unlock OFF
3	**Ignition Control Dome Light ON**	Ignition Control Dome Light OFF
4	**0.8 Second Door Lock Pulse**	3.5 Second Door Lock Pulse / 0.4 sec.
5	**Double Pulse Unlock OFF**	Double Pulse Unlock ON
6	**Double Pulse Lock OFF**	Double Pulse Lock ON
7	**Comfort Closure OFF**	Comfort Closure ON
8	**Code Hopping ON**	Code Hopping OFF

Note: Factory default settings are shown **BOLD.**

Note: For feature 1-4, the 3.5 second door lock pulse setting the siren (or horn) chirps twice, for the 0.4 second door lock pulse setting for the siren (or horn) chirps three times

S670 (2-Way Security with Keyless Entry)

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
1-1	**Active Arming**	Passive Arming
1-2	**Chirps ON**	Chirps OFF
1-3	**Ignition Control Door Locks ON**	Ignition Control Door Locks OFF
1-4	**Active Locking**	Passive Locking
1-5	**Door Lock Pulse Duration 0.8 Seconds**	Door Lock Pulse Duration 3.5 Seconds
1-6	**Single Unlock Pulse**	Double Unlock Pulse
1-7	**Anti-Code Grabbing ON**	Anti-Code Grabbing OFF
1-8	**Open Zone Bypass Notice ON**	Open Zone Bypass Notice OFF
1-9	**Single Unlock Pulse**	Double Unlock Pulse
1-10	Comfort Closure ON	**OFF**

Note: Factory default settings are shown **BOLD.**

RS10 (Remote Start with Keyless Entry)

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
1	**Engine Check ON**	Engine Checking OFF
2	**Tachometer Sensing**	Voltage Sensing
3	**12 Minute Run Time (1)***	24 Min (2)*, 60 Min Run Time (3)*
4	**Flashing Parking Light Output**	Constant Parking Light Output
5	**Cranking Time 0.6 Sec. (1)***	Crank Time 0.8 (2)*, 1.0 (3)*, 1.2 (4)*, 1.4 (5)*, 1.6 (6)*, 1.8 (7)*, 2.0 (8)*, 4.0 (9)*
6	**Voltage Check Level High**	Voltage Check Level Low
7	**Short Run (Turbo Timer): 1 Min. (1)***	Short Run (Turbo Timer): 3 (2)*, 5 (3)*, 10 (4)*
8	Activation Pulse: 1 (1)*	**Activation Pulses: 2 (2)***, 3 (3)*
9	**Ignition/Accessory Output: Ignition**	Ignition/Accessory Output: Accessory
10	**Accessory State During Wait to Start: OFF**	Accessory State During Wait to Start: ON
11	**2nd Status Output: Normal (1)***	Rear Defogger Latched (2)*, Pulsed (3)*
12	**Diesel Time Wait-to-Start Input (1)***	Timed 15 (2)*, 30 (3)*, 45 (4)* Seconds
13	**Run Time (Timer Mode) 12 Minutes (1)***	3 (2)*, 6 (3)*, 9 (4)* Minutes
14	**Door Lock Pulse Duration 0.8 Sec. (1)***	3.5 (2)*, 0.4 (3)* Seconds
15	**Unlock Output 1 Pulse**	Unlock Output 2 Pulses
16	**Lock Output 1 Pulse**	Lock Output 2 Pulses
17	**Ignition Unlock ON**	Ignition Unlock OFF
18	**Ignition Lock ON**	Ignition Lock ON
19	**Factory Alarm Disarm Function with Unlock**	Before Lock (2)*, Remote Start Only (3)*
20	**Factory Alarm Disarm 1 Pulse**	2 Pulse
21	Comfort Closure ON	**OFF**

Note: Factory default settings are shown **BOLD.**

Note: * The number in parentheses indicate the number of times the LED will flash.

UNGO – Programming Guide

Technical Information Module Programming: Models: S100, S400, S660, SR1000, SR5000, SR6000
System features can also be changed by using the ProSecurity Programmer

To program the features using the Valet switch:

1. Open a door. (The GREEN wire, H1/5, or the VIOLET, H1/7 must be connected.)

2. Key. Turn the ignition on and then back off.

3. Select Menu. Press and HOLD the Valet®/Program switch. When the LED flashes once and the siren chirps, Menu One has been selected. Continue to hold the switch until the LED flashes twice and the siren chirps twice, Menu Two has now been selected. Continue to hold the switch until the LED flashes three times and the siren chirps three times, Menu Three has now been selected. Release the switch after the Menu choice has been selected.

4. Choose. Within 10 seconds, press and release the Valet®/Program switch the number of times corresponding to the feature number you want to program and then press and hold the switch. (See *Feature Menus*.)

After a second, the LED will flash to indicate which feature you have accessed. For example, in Menu Two, groups of eight flashes would indicate access to the activation pulse setting (Feature 2-8). The horn will also honk eight times (if connected).

5. Transmit. The transmitter is used to select the desired setting. Pressing will change the feature to the LED ON setting (or will flash once for features with more than 2 settings). The sire will chirp once (if connected). Pressing will change the setting to the LED OFF setting (or will flash two or more times for features with more than 2 settings).

6. Release. The Valet®/Program switch can now be released.

You can advance from feature to feature by pressing and releasing the Valet®/Program switch the number of times necessary to get from the feature you just programmed to the feature you wish to access. For example, in Menu One, if you just programmed Feature 1-2 and you next want to program Feature 1-3 to off, release the Valet/Program switch. Press and release it once to advance from Feature 1-2 to Feature 1-3. Then press it once more and HOLD it. The LED will flash in groups of 3 and the horn will honk 3 times (if connected) to confirm that you have accessed Feature 1-3.

S100 and S400 (Security with Keyless Entry)

MENU 1

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
1-1	**Active Arming**	Passive Arming
1-2	**Chirps ON**	Chirps OFF
1-3	**Ignition Control Door Locks ON**	Ignition Control Door Locks OFF
1-4	**Active Locking**	Passive Locking
1-5	**Panic with Ignition ON**	Panic with Ignition OFF
1-6	**Door Lock Pulse Duration 0.8 Seconds**	Door Lock Pulse Duration 3.5 Seconds
1-7	**Forced Passive Arming ON**	Forced Passive Arming OFF
1-8	Automatic Engine Disable ON	**Automatic Engine Disable OFF**
1-9	**Armed When Driving**	Anti-Carjacking System
1-10	**Anti-Code Grabbing ON**	Anti-Code Grabbing OFF

MENU 2

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
2-1	**Siren Output Constant**	Siren Output Pulsed
2-2	**30-Second Siren Duration**	60-Second Siren Duration
2-3	**False Alarm Prevention Circuitry ON**	False Alarm Prevention Circuitry OFF
2-4	**Progressive Door Trigger**	Instant Door Trigger
2-5	**Override Switch Input: 1 Pulse (1)***	Override Switch Input: 2 (2)*, 3 (3)*, 4 (4)*, 5 (5)*
2-6	**Open Zone Bypass Notice ON**	Open Zone Bypass Notice OFF
2-7	**Ignition Controlled Dome Light ON**	Ignition Controlled Dome Light OFF
2-8	**Single Unlock Pulse**	Double Unlock Pulse
2-9	**Channel 3: Validity (1)***	Channel 3: Latched/Latched (2)*, Reset with Ignition (3)*, 30-Second Timed (4)*, Second Unlock Output (5)*

Note: Factory default settings are shown **BOLD.**
Note: * The number in parentheses indicate the number of times the LED will flash.

S660 (2-Way Security with Keyless Entry)

MENU 1

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
1-1	**Active Arming**	Passive Arming
1-2	**Chirps ON**	Chirps OFF
1-3	**Ignition Control Door Locks ON**	Ignition Control Door Locks OFF
1-4	**Ignition Unlock ON**	Ignition Unlock OFF
1-5	**Active Locking**	Passive Locking
1-6	**Panic with Ignition ON**	Panic with Ignition OFF
1-7	**Door Lock Pulse Duration 0.8 Seconds**	Door Lock Pulse Duration 3.5 Seconds
1-8	**Forced Passive Arming ON**	Forced Passive Arming OFF
1-9	Automatic Engine Disable ON	**Automatic Engine Disable OFF**
1-10	**Armed When Driving ON**	Armed When Driving OFF
1-11	**Anti-Code Grabbing ON**	Anti-Code Grabbing OFF

MENU 2

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
2-1	**Siren Output Constant**	Siren Output Pulsed
2-2	**30-Second Siren Duration**	60-Second Siren Duration
2-3	**False Alarm Prevention Circuitry ON**	False Alarm Prevention Circuitry OFF
2-4	**Progressive Door Trigger**	Instant Door Trigger
2-5	**Override Switch Input: 1 Pulse (1)***	Override Switch Input: 2 (2)*, 3 (3)*, 4 (4)*, 5 (5)*
2-6	**Open Zone Bypass Notice ON**	Open Zone Bypass Notice OFF
2-7	**Ignition Controlled Dome Light ON**	Ignition Controlled Dome Light OFF
2-8	**Single Unlock Pulse**	Double Unlock Pulse
2-9	**FAD with Channel 2 ON**	FAD with Channel 2 OFF
2-10	**Channel 4: Validity (1)***	Channel 4: Latched/Latched (2)*, Reset with Ignition (3)*, 30-Second Timed (4)*, 60-Second Timed (5)*, 90-Second Timed (6)*
2-11	**Channel 5: Validity (1)***	Channel 5: Latched/Latched (2)*, Reset with Ignition (3)*, 30-Second Timed (4)*, 60-Second Timed (5)*, 90-Second Timed (6)*

Note: Factory default settings are shown **BOLD.**
Note: * The number in parentheses indicate the number of times the LED will flash.

SR1000 (Remote Start with Security Combo)

MENU 1

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
1-1	**Active Arming**	Passive Arming
1-2	**Chirps ON**	Chirps OFF
1-3	**Ignition Control Door Locks ON**	Ignition Control Door Locks OFF
1-4	**Ignition Unlock ON**	Ignition Unlock OFF
1-5	**Active Locking**	Passive Locking
1-6	**Panic with Ignition ON**	Panic with Ignition OFF
1-7	**Door Lock Pulse Duration 0.8 Seconds**	Door Lock Pulse Duration 3.5 Seconds
1-8	**Forced Passive Arming ON**	Forced Passive Arming OFF
1-9	Automatic Engine Disable ON	**Automatic Engine Disable OFF**
1-10	**Armed When Driving ON**	Armed When Driving OFF
1-11	**Anti-Code Grabbing ON**	Anti-Code Grabbing OFF

MENU 2

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
2-1	**Siren Output Constant**	Siren Output Pulsed
2-2	**30-Second Siren Duration**	60-Second Siren Duration
2-3	**False Alarm Prevention Circuitry ON**	False Alarm Prevention Circuitry OFF
2-4	**Progressive Door Trigger**	Instant Door Trigger
2-5	**Override Switch Input: 1 Pulse (1)***	Override Switch Input: 2 (2)*, 3 (3)*, 4 (4)*, 5 (5)*
2-6	**Open Zone Bypass Notice ON**	Open Zone Bypass Notice OFF
2-7	**Ignition Controlled Dome Light ON**	Ignition Controlled Dome Light OFF
2-8	**Single Unlock Pulse**	Double Unlock Pulse
2-9	**FAD with Channel 2 ON**	FAD with Channel 2 OFF
2-10	**Channel 4: Validity (1)***	Channel 4: Latched/Latched (2)*, Reset with Ignition (3)*, 30-Second Timed (4)*, 60-Second Timed (5)*, 90-Second Timed (6)*
2-11	**Channel 5: Validity (1)***	Channel 5: Latched/Latched (2)*, Reset with Ignition (3)*, 30-Second Timed (4)*, 60-Second Timed (5)*, 90-Second Timed (6)*

MENU 3

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
3-1	**Engine Check ON**	Engine Checking OFF
3-2	**Tachometer Sensing**	Voltage Sensing
3-3	**12 Minute Run Time (1)***	24 Min (2)*, 60 Min Run Time (3)*
3-4	**Flashing Parking Light Output**	Constant Parking Light Output
3-5	**Cranking Time 0.6 Sec. (1)***	Crank Time 0.8 (2)*, 1.0 (3)*, 1.2 (4)*, 1.4 (5)*, 1.6 (6)*, 1.8 (7)*, 2.0 (8)*, 4.0 (9)*
3-6	**Voltage Check Level High**	Voltage Check Level Low
3-7	**Short Run (Turbo Timer): 1 Min. (1)***	Short Run (Turbo Timer): 3 (2)*, 5 (3)*, 10 (4)*
3-8	Activation Pulse: 1 (1)*	**Activation Pulses: 2 (2)***, 3 (3)*
3-9	**2nd Ignition Output**	2nd Accessory Output
3-10	**Accessory State During Wait to Start: OFF**	Accessory State During Wait to Start: ON
3-11	**2nd Status Output: Normal (1)***	Rear Defogger Latched (2)*, Pulsed (3)*
3-12	**Anti-Grind ON**	Anti-Grind OFF

Note: Factory default settings are shown **BOLD.**
Note:* The number in parentheses indicate the number of times the LED will flash.

SR5000 (2-Way Remote Start with Security Combo)

MENU 1

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
1-1	**Active Arming**	Passive Arming
1-2	**Chirps ON**	Chirps OFF
1-3	**Ignition Control Door Locks ON**	Ignition Control Door Locks OFF
1-4	**Active Locking**	Passive Locking
1-5	**Panic with Ignition ON**	Panic with Ignition OFF
1-6	**Door Lock Pulse Duration 0.8 Seconds**	Door Lock Pulse Duration 3.5 Seconds
1-7	**Forced Passive Arming ON**	Forced Passive Arming OFF
1-8	Automatic Engine Disable ON	**Automatic Engine Disable OFF**
1-9	**Armed When Driving**	Anti-Carjacking System
1-10	**Anti-Code Grabbing ON**	Anti-Code Grabbing OFF

MENU 2

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
2-1	**Siren Output Constant**	Siren Output Pulsed
2-2	**30-Second Siren Duration**	60-Second Siren Duration
2-3	**False Alarm Prevention Circuitry ON**	False Alarm Prevention Circuitry OFF
2-4	**Progressive Door Trigger**	Instant Door Trigger
2-5	**Override Switch Input: 1 Pulse (1)***	Override Switch Input: 2 (2)*, 3 (3)*, 4 (4)*, 5 (5)*
2-6	**Open Zone Bypass Notice ON**	Open Zone Bypass Notice OFF
2-7	**Ignition Controlled Dome Light ON**	Ignition Controlled Dome Light OFF
2-8	**Single Unlock Pulse**	Double Unlock Pulse
2-9	**FAD with Channel 2 ON**	FAD with Channel 2 OFF
2-10	**Channel 4: Validity (1)***	Channel 4: Latched/Latched (2)*, Reset with Ignition (3)*, 30-Second Timed (4)*, 60-Second Timed (5)*, 90-Second Timed (6)*

MENU 3

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
3-1	**Engine Check ON**	Engine Checking OFF
3-2	**Tachometer Sensing**	Voltage Sensing
3-3	**12 Minute Run Time (1)***	24 Min (2)*, 60 Min Run Time (3)*
3-4	**Flashing Parking Light Output**	Constant Parking Light Output
3-5	**Cranking Time 0.6 Sec. (1)***	Crank Time 0.8 (2)*, 1.0 (3)*, 1.2 (4)*, 1.4 (5)*, 1.6 (6)*, 1.8 (7)*, 2.0 (8)*, 4.0 (9)*
3-6	**Voltage Check Level High**	Voltage Check Level Low
3-7	**Auxiliary Output: Factory Alarm Disarm**	Special Accessory
3-8	**Status Output**	Factory Alarm Rearm

3-9	**Anti-Grind ON**	Anti-Grind OFF

Note: Factory default settings are shown **BOLD.**

Note: * The number in parentheses indicate the number of times the LED will flash.

SR6000 (2-Way Remote Start with Security Combo)

MENU 1

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
1-1	**Active Mode**	Passive Mode
1-2	**Chirps ON**	Chirps OFF
1-3	**Ignition Lock ON**	Ignition Lock OFF
1-4	**Ignition Unlock ON**	Ignition Unlock OFF
1-5	**Active Locking**	Passive Locking
1-6	**Panic with Ignition ON**	Panic with Ignition OFF
1-7	**Door Lock Pulse Duration 0.8 Seconds**	Door Lock Pulse Duration 3.5 Seconds
1-8	**Forced Passive Arming ON**	Forced Passive Arming OFF
1-9	Automatic Engine Disable ON	**Automatic Engine Disable OFF**
1-10	**Armed When Driving**	Anti-Carjacking System
1-11	**Anti-Code Grabbing ON**	Anti-Code Grabbing OFF

MENU 2

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
2-1	**Siren Output Constant**	Siren Output Pulsed
2-2	**30-Second Siren Duration**	60-Second Siren Duration
2-3	**False Alarm Prevention Circuitry ON**	False Alarm Prevention Circuitry OFF
2-4	**Progressive Door Trigger**	Instant Door Trigger
2-5	**Override Switch Input: 1 Pulse (1)***	Override Switch Input: 2 (2)*, 3 (3)*, 4 (4)*, 5 (5)*
2-6	**Open Zone Bypass Notice ON**	Open Zone Bypass Notice OFF
2-7	**Ignition Controlled Dome Light ON**	Ignition Controlled Dome Light OFF
2-8	**Single Unlock Pulse**	Double Unlock Pulse
2-9	**FAD with Channel 2 ON**	FAD with Channel 2 OFF
2-10	**Channel 4: Validity (1)***	Channel 4: Latched/Latched (2)*, Reset with Ignition (3)*, 30-Second Timed (4)*, 60-Second Timed (5)*, 90-Second Timed (6)*

2-11	**Channel 5: Validity (1)***	Channel 5: Latched/Latched (2)*, Reset with Ignition (3)*, 30-Second Timed (4)*, 60-Second Timed (5)*, 90-Second Timed (6)*

MENU 3

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
3-1	**Engine Check ON**	Engine Checking OFF
3-2	**Tachometer Sensing**	Voltage Sensing
3-3	**12 Minute Run Time (1)***	24 Min (2)*, 60 Min Run Time (3)*
3-4	**Flashing Parking Light Output**	Constant Parking Light Output
3-5	**Cranking Time 0.6 Sec. (1)***	Crank Time 0.8 (2)*, 1.0 (3)*, 1.2 (4)*, 1.4 (5)*, 1.6 (6)*, 1.8 (7)*, 2.0 (8)*, 4.0 (9)*
3-6	**Voltage Check Level High**	Voltage Check Level Low
3-7	**Short Run (Turbo Timer): 1 Min. (1)***	Short Run (Turbo Timer): 3 (2)*, 5 (3)*, 10 (4)*
3-8	Activation Pulse: 1 (1)*	**Activation Pulses: 2 (2)***, 3 (3)*
3-9	**2nd Ignition Output**	2nd Accessory Output
3-10	**Accessory State During Wait to Start: OFF**	Accessory State During Wait to Start: ON
3-11	**2nd Status Output: Normal (1)***	Rear Defogger Latched (2)*, Pulsed (3)*
3-12	**Anti-Grind ON**	Anti-Grind OFF

Note: Factory default settings are shown **BOLD.**

Note: * The number in parentheses indicate the number of times the LED will flash.

RK1 (Advanced Remote Start with Keyless Entry)

MENU 1

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
1-1	**Active Mode**	Passive Mode
1-2	**Chirps ON**	Chirps OFF
1-3	**Ignition Lock ON**	Ignition Lock OFF
1-4	**Ignition Unlock ON**	Ignition Unlock OFF
1-5	**Active Locking**	Passive Locking
1-6	**Panic with Ignition ON**	Panic with Ignition OFF
1-7	**Door Lock Pulse Duration 0.8 Seconds**	Door Lock Pulse Duration 3.5 Seconds
1-8	**Double Unlock Pulse OFF**	Double Unlock Pulse ON
1-9	**Channel 2 Delayed Validity (1)***	Channel 2 Latched (2)*, Latched Reset with Ignition (3)*, 30 Second Timed (4)*
1-10	**FAD with Channel 2 ON**	FAD with Channel 2 OFF
1-11	**Security Features ON**	Security Features OFF (Starter Kill)

1-12	**Code Hopping ON**	Code Hopping OFF
1-13	**Channel 4 Validity (1)***	Latched (2)*, Latched Reset with Ignition (3)*, 30-Second Timed (4)*

MENU 2

Feature Number	Default LED ON (Press Channel 1)	LED OFF Setting (Press Channel 2)
2-1	**Engine Check ON**	Engine Checking OFF
2-2	**Tachometer Sensing**	Voltage Sensing
2-3	**12 Minute Run Time (1)***	24 Min (2)*, 60 Min Run Time (3)*
2-4	**Flashing Parking Light Output**	Constant Parking Light Output
2-5	**Cranking Time 0.6 Sec. (1)***	Crank Time 0.8 (2)*, 1.0 (3)*, 1.2 (4)*, 1.4 (5)*, 1.6 (6)*, 1.8 (7)*, 2.0 (8)*, 4.0 (9)*
2-6	**Voltage Check Level High**	Voltage Check Level Low
2-7	**Short Run (Turbo Timer): 1 Min. (1)***	Short Run (Turbo Timer): 3 (2)*, 5 (3)*, 10 (4)*
2-8	Activation Pulse: 1 (1)*	**Activation Pulses: 2 (2)***, 3 (3)*
2-9	**2nd Ignition Output**	2nd Accessory Output
2-10	**Accessory State During Wait to Start: OFF**	Accessory State During Wait to Start: ON
2-11	**2nd Status Output: Normal (1)***	Rear Defogger Latched (2)*, Pulsed (3)*
2-12	**Anti-Grind ON**	Anti-Grind OFF

Note: Factory default settings are shown **BOLD.**
Note: * The number in parentheses indicate the number of times the LED will flash.

Remote Programming

1. Open a door. (The GREEN wire, H1/5, or the VIOLET, H1/7 must be connected.)

2. Key. Turn the ignition to the ON position.

3. Choose. Within 10 seconds, press and release the Program switch the number of times corresponding to the desired channel listed below. Once you have selected the channel, press the switch once more and HOLD it. The LED will flash and the horn will honk (if connected) to confirm the selected channel. Do not release the Program switch.

UNGO – Remote Programming

4. Transmit. While HOLDING the Valet/Program switch, press the button on the transmitter that you would like to control the selected receiver channel. The unit will chirp to confirm that the code has been successfully programmed. It is not possible to teach a transmitter button to the system more than once.

5. Release. Once the code is learned, the Valet/Program switch can be released.

K10, S100, S400

Channel Number	Function	Wire Color
1	Arm/Disarm/Panic	
2	Silent Mode / Channel 2 Output	Red/White
3	Channel 3 Output	White/Blue
4	Arm Only	
5	Disarm Only	
6	Panic Only	
7	Auto-Learn Single Button Arm/Disarm Configuration	
8	Auto-Learn Standard Configuration	
9	Delete All Remotes	

K20

Channel Number	Function	Wire Color
1	Auto-Learn Standard Configuration	
2	Arm Only	
3	Disarm Only	
4	Silent Mode / Channel 2 Output	Red/White
5	Channel 3 Output	White/Blue
6	Arm/Disarm/Panic	
7	Panic Only	
8	Delete All Remotes	

RS10

Channel Number	Function	Wire Color

1	Auto-Learn	
2	Lock/Unlock	
3	Channel 2 Output	Red/White
4	Remote Start	
5	Turbo Timer / Short Run	
6	Turbo Timer / Short Run	
7	Rear Window Defogger Control	
8	Delete All Remotes	

S660

Channel Number	Function	Wire Color
1	Auto-Learn Standard Configuration	
2	Arm Only	
3	Disarm Only	
4	Silent Mode / Channel 2 Output	Red/White
5	*No Function*	
6	Channel 4	Violet/Black
7	Channel 5	White/Black
8	*No Function*	
9	*No Function*	
10	Arm/Disarm/Panic	
11	Panic Only	
12	Delete All Remotes	

S670

Channel Number	Function	Wire Color
1	Arm/Disarm/Panic	
2	Silent Mode / Channel 2 Output	Red/White
3	Channel 3	White/Blue
4	Channel 4	Violet/Black
5	Arm Only	
6	Disarm Only	
7	Panic Only	
8	Auto-Learn (4-Button and LCD 2-Way Remotes)	
9	Auto-Learn (3 Button Optional Remotes)	
10	Delete All Remotes	

SR1000, SR6000

Channel Number	Function	Wire Color
1	Auto-Learn Standard Configuration	
2	Arm Only	
3	Disarm Only	
4	Silent Mode / Channel 2 Output	Red/White

5	Remote Start	
6	Channel 4	Violet/Black
7	Channel 5	White/Black
8	Turbo Timer / Short Run	
9	Timer Mode	
10	Arm/Disarm/Panic	
11	Panic Only	
12	Delete All Remotes	

SR5000

Channel Number	Function	Wire Color
1	Arm/Disarm/Panic	
2	Silent Mode / Channel 2 Output	Red/White
3	Remote Start	
4	Channel 4	Violet/Black
5	Arm Only	
6	Disarm Only	
7	Panic Only	
8	Auto-Learn Standard Configuration	
9	Auto-Learn Single Button Arm/Disarm Configuration	
10	Delete All Remotes	

RK1

Channel Number	Function	Wire Color
1	Auto-Learn Standard Configuration	
2	Arm Only	
3	Disarm Only	
4	Silent Mode / Channel 2 Output	Red/White
5	Remote Start	
6	Channel 4	Violet/Black
7	Turbo Timer / Short Run	
8	Timer Mode	
9	Arm/Disarm/Panic	
10	Panic Only	
11	Delete All Remotes	

Quick Reference Wiring Diagrams: K10 (Keyless Entry)

12-Pin Harness

Wire Color	Polarity	Function
Orange	(-) 500mA	Ground When Armed
White	(-) 200mA	Parking Light Output
White/Blue	(-) 200mA	Channel 3 Auxiliary Output
Black/White	(-) 200mA	Dome Light Supervision Output
Green		Not Used
Blue	(-) Negative	Second Unlock Output
Violet		Not Used
Black	(-) Negative	Chassis Ground
Yellow	(+) Positive	Ignition Input
Brown	(-) 200mA	Horn Output
Red	(+) Positive	Constant Power
Red/White	(-) 200mA	Channel 2 Auxiliary Output

3-Pin Harness

Wire Color	Polarity	Function
Green	(-) Lock, (+) Unlock	(-) Lock, (+) Unlock
Empty		
Blue	(-) Unlock, (+) Lock	(-) Unlock, (+) Lock

Quick Reference Wiring Diagrams: K20 (Keyless Entry with On-Board Relays)

18-Pin Harness

Wire Color	Polarity	Function
Violet		Unlock #87 Normally Open (Input)
Red/White	(-) 200mA	Channel 2 Auxiliary Output
Blue/Black		Unlock #30 Common Output
Brown/Black		Unlock #87A Normally Open (Input)
Violet/Black		Lock #87 Normally Open (Input)
Orange	(-) 500mA	Ground When Armed
White/Black		Lock #87 Normally Closed
Yellow	(+) Positive	Ignition Input
Green/Black		Lock #30 Common Output
White/Blue	(-) 200mA	Channel 3 Auxiliary Output
Black/White		Output of Domelight Supervision Relay #87
LT. Green/Black	(-) 200mA	Factory Alarm Disarm
Black/White-1		Input of Domelight Supervision Relay #30
Brown	(-) 200mA	Horn Output
Blue	(-) Negative	Second Unlock Output
Black	(-) Negative	Chassis Ground
Red	(+) Positive	Constant Power
White	(+) 10 amp / (-) 200mA	Parking Light Output

Quick Reference Wiring Diagrams: RS10 (Remote Start with Keyless Entry)

5-Pin Harness

Wire Color	Polarity	Function
Blue/White	(-) 200mA	2nd Status Output / Rear Defroster
Gray	(-) Negative	Hood Pin Shutdown
Brown	(+) Positive	Brake Shutdown
Violet/White		Tachometer Input
Black/White	(-) Negative	Neutral Safety Shutdown

9-Pin Harness

Wire Color	Polarity	Function
White	(+) 10 amp / (-) 200mA	Parking Light Output
Black	(-) Negative	Chassis Ground
Red/White	(-) 200mA	Channel 2 Auxiliary Output
White/Red	(+) Positive	Activation Input
Gray/Black	(-) Negative	Wait to Start Input
White/Blue	(-) Negative	Activation Input
Yellow	(-) Negative	Ignition Input
Green/White	(-) 200mA	Factory Alarm Rearm
Green/Black	(-) 200mA	Factory Alarm Disarm

4-Pin Harness

Wire Color	Polarity	Function
Pink	(-) 200mA	3rd Ignition Turn Output
Purple	(-) 200mA	2nd Starter Output
Orange	(-) 200mA	2nd Accessory Output
Blue	(-) 200mA	Status Output

6-Pin Harness

Wire Color	Polarity	Function
Red	(+) Positive	High Current Constant Power
Pink/White	(+) Positive	Programmable Output for Accessory or Ignition 2
Red	(+) Positive	High Current Constant Power
Orange	(+) Positive	Accessory Output
Purple	(+) Positive	Starter Output
Pink	(+) Positive	Ignition Output

3-Pin Harness

Wire Color	Polarity	Function
Green	(-) Lock, (+) Unlock	(-) Lock, (+) Unlock
Empty		
Blue	(-) Unlock, (+) Lock	(-) Unlock, (+) Lock

Quick Reference Wiring Diagrams: RK1 (Advanced Remote Start with Keyless Entry)

12-Pin Harness

Wire Color	Polarity	Function
Orange	(-) 500mA	Ground When Armed
White	(+) 10 amp / (-) 200mA	Parking Light Output
White/Blue	(-) Negative	Activation Input
Black/White	(-) 200mA	Dome Light Supervision Output
Green		Not Used
Blue	(-) Negative	Second Unlock Output
Violet		Not Used
Black	(-) Negative	Chassis Ground
Brown	(-) 200mA	Horn Output
Red	(+) Positive	Constant Power
Red/White	(-) 200mA	Channel 2 Auxiliary Output

5-Pin Harness

Wire Color	Polarity	Function
Blue/White	(-) 200mA	2nd Status Output / Rear Defroster
Gray	(-) Negative	Hood Pin Shutdown
Brown	(+) Positive	Brake Shutdown
Violet/White		Tachometer Input
Black/White	(-) Negative	Neutral Safety Shutdown

4-Pin Harness

LT. Green/Black	(-) 200mA	Factory Alarm Disarm
Gray/Black	(-) Negative	Wait to Start Input
Green/White	(-) 200mA	Factory Alarm Rearm
Violet/Black	(-) 200mA	Channel 4 Auxiliary Output

3-Pin Harness

Wire Color	Polarity	Function
Green	(-) Lock, (+) Unlock	(-) Lock, (+) Unlock
Empty		
Blue	(-) Unlock, (+) Lock	(-) Unlock, (+) Lock

4-Pin Harness (Relay Satellite)

Blue	(-) 200mA	Status Output
Orange	(-) 200mA	2nd Accessory Output
Purple	(-) 200mA	2nd Starter Output
Pink	(-) 200mA	3rd Ignition Output

8-Wire Harness (Relay Satellite)

Purple	(+) Positive	Starter Side Starter Wire
Green	(+) Positive	Key Side Starter Wire
Red	(+) Positive	High Current Constant Power
Orange	(+) Positive	Accessory 1 Output
Red	(+) Positive	High Current Constant Power
Pink	(+) Positive	Ignition 1 Output
Red/White	(+) Positive	High Current Constant Power
Pink/White	(+) Positive	Ignition 2 Output

Quick Reference Wiring Diagrams: S100 (Security with Keyless Entry)

12-Pin Harness

Wire Color	Polarity	Function
Orange	(-) 500mA	Ground When Armed
White	(+) 10 amp / (-) 200mA	Parking Light Output
White/Blue	(-) 200mA	Channel 3 Auxiliary Output
Black/White	(-) 200mA	Dome Light Supervision Output
Green	(-) Negative	Door Trigger Input
Blue	(-) Negative	Instant Trigger Input
Violet	(+) Positive	Door Trigger Input
Black	(-) Negative	Chassis Ground
Yellow	(+) Positive	Ignition Input
Brown	(+) Positive	Siren Output
Red	(+) Positive	Constant Power
Red/White	(-) 200mA	Channel 2 Auxiliary Output

4-Pin Shock Sensor Harness

Wire Color	Polarity	Function
Red	(+) Positive	Constant Power
Black	(-) Negative	Chassis Ground
Blue	(-) Negative	Multiplex Input, Zone 2
Green	(-) Negative	Multiplex Input, Zone 4

3-Pin Harness

Wire Color	Polarity	Function
Green	(-) Lock, (+) Unlock	(-) Lock, (+) Unlock
Empty		
Blue	(-) Unlock, (+) Lock	(-) Unlock, (+) Lock

Quick Reference Wiring Diagrams: S400 (Security with Keyless Entry)

12-Pin Harness

Wire Color	Polarity	Function
Orange	(-) 500mA	Ground When Armed
White	(+) 10 amp / (-) 200mA	Parking Light Output
White/Blue	(-) 200mA	Channel 3 Auxiliary Output
Black/White	(-) 200mA	Output of Domelight Supervision Relay #30
Green	(-) Negative	Door Trigger Input
Blue	(-) Negative	Instant Trigger Input
Violet	(+) Positive	Door Trigger Input
Black	(-) Negative	Chassis Ground
Yellow	(+) Positive	Ignition Input
Brown	(+) Positive	Siren Output
Red	(+) Positive	Constant Power
Red/White	(-) 200mA	Channel 2 Auxiliary Output #30

8-Pin Relay Harness

Violet		Unlock #87 Normally Open (Input)
Blue/Black		Unlock #30 Common Output
Brown/Black		Unlock #87A Normally Open (Input)
Violet/Black		Lock #87 Normally Open (Input)
Green/Black		Lock #30 Common Output
White/Black		Lock #87 Normally Closed
Black/White		Domelight Supervision Relay Input #87
Red/White		Channel 2 Relay Input #87

4-Pin Shock Sensor Harness

Wire Color	Polarity	Function
Red	(+) Positive	Constant Power
Black	(-) Negative	Chassis Ground
Blue	(-) Negative	Multiplex Input, Zone 2
Green	(-) Negative	Multiplex Input, Zone 4

Quick Reference Wiring Diagrams: S660 (2-Way Security with Keyless Entry)

12-Pin Harness

Wire Color	Polarity	Function
Orange	(-) 500mA	Ground When Armed
White	(+) 10 amp / (-) 200mA	Parking Light Output
White/Blue		No Function
Black/White	(-) 200mA	Output of Domelight Supervision
Green	(-) Negative	Door Trigger Input
Blue	(-) Negative	Instant Trigger Input
Violet	(+) Positive	Door Trigger Input
Black	(-) Negative	Chassis Ground
Empty		
Brown	(+) Positive	Siren Output
Red	(+) Positive	Constant Power
Red/White	(-) 200mA	Channel 2 Auxiliary Output #30

1-Wire Harness

Wire Color	Polarity	Function
Yellow	(+) Positive	Ignition Input

6-Wire Harness

Wire Color	Polarity	Function
LT. Green/Black	(-) 200mA	Factory Alarm Disarm
Gray/Black		No Function
Green/White	(-) 200mA	Factory Alarm Rearm
Violet/Black	(-) 200mA	Channel 4 Auxiliary Output
White/Black	(-) 200mA	Channel 5 Auxiliary Output
LT. Blue	(-) 200mA	2nd Unlock Output

3-Pin Harness

Wire Color	Polarity	Function
Green	(-) Lock, (+) Unlock	(-) Lock, (+) Unlock
Empty		
Blue	(-) Unlock, (+) Lock	(-) Unlock, (+) Lock

Quick Reference Wiring Diagrams: S670 (2-Way Security with Keyless Entry)

12-Pin Harness

Wire Color	Polarity	Function
Orange	(-) 500mA	Ground When Armed
White	(+) 10 amp / (-) 200mA	Parking Light Output
White/Blue	(-) 200mA	Channel 3 Auxiliary Output
Black/White	(-) 200mA	Output of Domelight Supervision
Green	(-) Negative	Door Trigger Input
Blue	(-) Negative	Instant Trigger Input
Violet	(+) Positive	Door Trigger Input
Black	(-) Negative	Chassis Ground
Yellow	(+) Positive	Ignition Input
Brown	(+) Positive	Siren Output
Red	(+) Positive	Constant Power
Red/White	(-) 200mA	Channel 2 Auxiliary Output

7-Pin Relay Harness

Violet		Unlock #87 Normally Open (Input)
Blue/Black		Unlock #30 Common Output
Brown/Black		Unlock #87A Normally Open (Input)
Violet/Black		Lock #87 Normally Open (Input)
Green/Black		Lock #30 Common Output
White/Black		Lock #87 Normally Closed
Black/White		Domelight Supervision Relay Input #87

3-Pin Harness

Wire Color	Polarity	Function
Violet/Black	(-) 200mA	Channel 4 Output
Brown/Black	(-) 200mA	Horn Honk Output
Blue	(-) 200mA	2nd Unlock Output

4-Pin Shock Sensor Harness

Wire Color	Polarity	Function
Red	(+) Positive	Constant Power
Black	(-) Negative	Chassis Ground
Blue	(-) Negative	Multiplex Input, Zone 2
Green	(-) Negative	Multiplex Input, Zone 4

Quick Reference Wiring Diagrams: SR1000 (Security with Remote Start and Keyless Entry)

12-Pin Harness

Wire Color	Polarity	Function
Orange	(-) 500mA	Ground When Armed
White	(+) 10 amp / (-) 200mA	Parking Light Output
White/Blue	(-) Negative	Activation Input
Black/White	(-) 200mA	Output of Domelight Supervision
Green	(-) Negative	Door Trigger Input
Blue	(-) Negative	Instant Trigger Input
Violet	(+) Positive	Door Trigger Input
Black	(-) Negative	Chassis Ground
Empty		
Brown	(+) Positive	Siren Output
Red	(+) Positive	Constant Power
Red/White	(-) 200mA	Channel 2 Auxiliary Output

5-Pin Harness

Wire Color	Polarity	Function
Blue/White	(-) 200mA	2nd Status Output / Rear Defroster
Gray	(-) Negative	Hood Pin Shutdown
Brown	(+) Positive	Brake Shutdown
Violet/White		Tachometer Input
Black/White	(-) Negative	Neutral Safety Shutdown

6-Wire Harness

Wire Color	Polarity	Function
LT. Green/Black	(-) 200mA	Factory Alarm Disarm
Gray/Black		No Function
Green/White	(-) 200mA	Factory Alarm Rearm
Violet/Black	(-) 200mA	Channel 4 Auxiliary Output
White/Black	(-) 200mA	Channel 5 Auxiliary Output
LT. Blue	(-) 200mA	2nd Unlock Output

4-Pin Shock Sensor Harness

Wire Color	Polarity	Function
Red	(+) Positive	Constant Power
Black	(-) Negative	Chassis Ground
Blue	(-) Negative	Multiplex Input, Zone 2
Green	(-) Negative	Multiplex Input, Zone 4

4-Pin Harness (Relay Satellite)

Blue	(-) 200mA	Status Output
Orange	(-) 200mA	2nd Accessory Output
Purple	(-) 200mA	2nd Starter Output
Pink	(-) 200mA	3rd Ignition Output

8-Wire Harness (Relay Satellite)

Purple	(+) Positive	Starter Side Starter Wire
Green	(+) Positive	Key Side Starter Wire
Red	(+) Positive	High Current Constant Power
Orange	(+) Positive	Accessory 1 Output
Red	(+) Positive	High Current Constant Power
Pink	(+) Positive	Ignition 1 Output
Red/White	(+) Positive	High Current Constant Power
Pink/White	(+) Positive	Ignition 2 Output

Quick Reference Wiring Diagrams: SR5000 (2-Way Security with Remote Start and Keyless Entry)

12-Pin Harness

Wire Color	Polarity	Function
Orange	(-) 500mA	Ground When Armed
White	(+) 10 amp / (-) 200mA	Parking Light Output
White/Blue	(-) Negative	Activation Input
Black/White	(-) 200mA	Output of Domelight Supervision
Green	(-) Negative	Door Trigger Input
Blue	(-) Negative	Instant Trigger Input
Violet	(+) Positive	Door Trigger Input
Black	(-) Negative	Chassis Ground
Empty		
Brown	(+) Positive	Siren Output
Red	(+) Positive	Constant Power
Red/White	(-) 200mA	Channel 2 Auxiliary Output

6-Pin Harness

Wire Color	Polarity	Function
Blue	(-) 200mA	Status / Factory Security Rearm Output
Blue/Black	(-) 200mA	3rd Ignition Output
Gray	(-) Negative	Hood Pin Shutdown
Brown	(+) Positive	Brake Shutdown
Violet/White		Tachometer Input
Black/White	(-) Negative	Neutral Safety Shutdown

5-Pin Remote Start Ribbon Harness

Wire Color	Polarity	Function
Red	(+) Positive	Constant Power
Yellow	(+) Positive	Ignition Input
Pink	(-) 200mA	1st and 2nd Ignition Relay Output
Orange	(-) 200mA	Accessory Relay Output
Purple	(-) 200mA	Starter Relay Output

3-Pin Auxiliary Harness

Wire Color	Polarity	Function
Gray/Black	(-) Negative	Wait to Start Input
LT. Green/Black	(-) 200mA	Factory Alarm Disarm / Special Accessory Output
Violet/Black	(-) 200mA	Channel 4 Output

4-Pin Shock Sensor Harness

Wire Color	Polarity	Function
Red	(+) Positive	Constant Power
Black	(-) Negative	Chassis Ground
Blue	(-) Negative	Multiplex Input, Zone 2
Green	(-) Negative	Multiplex Input, Zone 4

3-Pin Harness

Wire Color	Polarity	Function
Green	(-) Lock, (+) Unlock	(-) Lock, (+) Unlock
Empty		
Blue	(-) Unlock, (+) Lock	(-) Unlock, (+) Lock

Quick Reference Wiring Diagrams: SR6000 (2-Way Security with Remote Start and Keyless Entry)

12-Pin Harness

Wire Color	Polarity	Function
Orange	(-) 500mA	Ground When Armed
White	(+) 10 amp / (-) 200mA	Parking Light Output
White/Blue	(-) Negative	Activation Input
Black/White	(-) 200mA	Output of Domelight Supervision
Green	(-) Negative	Door Trigger Input
Blue	(-) Negative	Instant Trigger Input
Violet	(+) Positive	Door Trigger Input
Black	(-) Negative	Chassis Ground
Empty		
Brown	(+) Positive	Siren Output
Red	(+) Positive	Constant Power
Red/White	(-) 200mA	Channel 2 Auxiliary Output

5-Pin Harness

Wire Color	Polarity	Function
Blue/White	(-) 200mA	2nd Status Output / Rear Defroster
Gray	(-) Negative	Hood Pin Shutdown
Brown	(+) Positive	Brake Shutdown
Violet/White		Tachometer Input
Black/White	(-) Negative	Neutral Safety Shutdown

6-Wire Harness

Wire Color	Polarity	Function
LT. Green/Black	(-) 200mA	Factory Alarm Disarm
Gray/Black	(-) Negative	Wait to Start Input
Green/White	(-) 200mA	Factory Alarm Rearm
Violet/Black	(-) 200mA	Channel 4 Auxiliary Output
White/Black	(-) 200mA	Channel 5 Auxiliary Output
LT. Blue	(-) 200mA	2nd Unlock Output

4-Pin Shock Sensor Harness

Wire Color	Polarity	Function
Red	(+) Positive	Constant Power
Black	(-) Negative	Chassis Ground
Blue	(-) Negative	Multiplex Input, Zone 2
Green	(-) Negative	Multiplex Input, Zone 4

3-Pin Harness

Wire Color	Polarity	Function
Green	(-) Lock, (+) Unlock	(-) Lock, (+) Unlock
Empty		
Blue	(-) Unlock, (+) Lock	(-) Unlock, (+) Lock

4-Pin Harness (Relay Satellite)

Blue	(-) 200mA	Status Output
Orange	(-) 200mA	2nd Accessory Output
Purple	(-) 200mA	2nd Starter Output
Pink	(-) 200mA	3rd Ignition Output

8-Wire Harness (Relay Satellite)

Purple	(+) Positive	Starter Side Starter Wire
Green	(+) Positive	Key Side Starter Wire
Red	(+) Positive	High Current Constant Power
Orange	(+) Positive	Accessory 1 Output
Red	(+) Positive	High Current Constant Power
Pink	(+) Positive	Ignition 1 Output
Red/White	(+) Positive	High Current Constant Power
Pink/White	(+) Positive	Ignition 2 Output